# Quick Guide



**Division of Ecological and Water Resources** 

500 Lafayette Rd. ■ St. Paul, MN 55155-4025 ■ 651-259-5713 https://mndnr.gov/floodplain

#### **Table of Contents**

13 ...... New Format Flood Insurance Rate Maps

14 ...... "Pre-1988" Flood Insurance Rate Maps

17 ...... Understanding the Floodway

15 ...... "Pre-1988" Flood Boundary and Floodway Map

16 ...... Using the Riverine Flood Profile to Determine Riverine BFEs

1 About This Guide	18 Floodway Data Table			
2 Why Do We Regulate the Floodplain?	19 Regulatory Flood Protection Elevation (RFPE)			
3 Minnesota Disaster and Floodplain Facts	FLOODPLAIN DATA AND RESOURCES			
4 What is the National Flood Insurance Program?	20 Approximate Zone A			
5Local, State, Regional, and Federal Roles and Responsibilities	21 Sources for BFEs in Approximate Zone A Without BFEs			
6 Community Responsibilities	22 Minnesota's Lake & Flood Elevations Online (LFEO)			
7 NFIP Recommended Planning Considerations	Application			
8 Flood Insurance: Property Owner's Financial Protection	23 LFEO Application Options			
9 The NFIP's Community Rating System (CRS)	24 Minnesota's FEMA Hydraulic Model Download Site			
FLOODPLAINS AND FLOOD MAPS	FIRM AMENDMENTS AND REVISIONS			
10 Looking for FEMA Flood Map Information?	25 FIRM Revisions: Letters of Map Revision (LOMA)			
11 FIRMette: FEMA Flood Maps Online	26 Are Building Sites Higher than the BFE?			
12 Understanding the Riverine Floodplain	<b>27</b> LOMAs: "Out as Shown"			

28 ...... Options to Document Structures are Not in SFHAs

31 ...... FIRM Revisions: Letters of Map Revision Based on Fill (LOMR-F)

29 ...... More on LOMAs: Using LiDAR Topography

30 ...... More on LOMAs: Basements and Decks

32 ...... FIRM Revisions: CLOMRs and LOMRs

33 ...... Levee Certification for FIRMs

#### Table of Contents (continued)

#### CONSIDERATIONS FOR SITING DEVELOPMENT 48 ...... Completing the Elevation Certificate 34 ...... Floods Don't Always Stop at the BFE 49 ...... Paperwork is Important for Owners 35 ...... Avoid SFHAs When Possible REQUIREMENTS FOR BUILDINGS 36 ...... Fill Can Adversely Affect Floodplain Functions 50 ...... Fundamentals of Flood Resistant Construction 51 ...... How to Elevate Buildings in Flood Zone A/AE **FUNDAMENTALS FOR ALL DEVELOPMENT 37** ...... Development in SFHAs Requires Local Permits and Approvals **52** ....... Placement and Compaction of Fill in Zone A/AE 38 ...... Some Key Floodplain Development Permit Review Steps 53 ...... Basements in Flood Zones Are Unsafe **39** ...... Minimum Requirements Based on Actual Ground Elevations **54** ...... Enclosures Below the Lowest Floor (Zone A/AE) 40 ...... Minimum Elevation Requirements in Shoreland Districts 55 ...... Crawlspace\* Details (Zone A/AE) 41 ...... The Floodway "No-Rise" Certification 56 ...... Utility Service and Equipment Inside Enclosures 42 ...... Limiting Rises Where Floodways Not Delineated **57** ....... Utility Service, Equipment, and Tanks (Outside) 43 ...... Freeboard: Build Higher, Reduce Damage, Save on **58** ...... Manufactured Homes Require Special Attention NFIP Insurance 59 ...... General Requirements in Lake Superior Coastal High 44 ...... Variances From Elevation Requirements Hazard Areas (Zone V) **APPLICATIONS AND ELEVATION CERTIFICATES** OTHER STRUCTURES AND DEVELOPMENT 45 ...... Carefully Complete the Permit Application 60 ..... Accessory Structures 46 ...... Communities Must Retain Flood Records Permanently 61 ...... Agricultural Structures 47 ...... What is the Elevation Certificate and How is it Used? 62 ...... Recreational Vehicles

#### Table of Contents (continued)

63	. Pools in Flood Hazard Areas
64	. Solar Power Facilities and Solar Panels in Flood Hazard Areas
EXISTIN	G BUILDINGS
<b>65</b>	. Improvements and Repairs of Buildings in Flood Zones
66	. What is Meant by Pre-FIRM and Post-FIRM?
<b>67</b>	. Substantial Improvement/Substantial Damage Desk Reference
68	. Answers to Questions about Substantial Improvement and Substantial Damage
69	. Estimating Costs of Improvements and Repairs
<b>70</b>	. Estimating Substantial Damage
<b>71</b>	. Non-Substantial Improvements
<b>72</b>	. Non-Substantial Improvement: Lateral Addition
<b>73</b>	. Substantial Improvement: Additions
<b>74</b>	. Substantial Improvement: Renovation Only
<b>75</b>	. Elevating an Existing Building
<b>76</b>	. Repair of Damaged Buildings
<b>77</b>	. Paying for Post-Flood Compliance

#### FLOOD PROTECTION AND MITIGATION

- **78** ...... Some Flood Protection for Older Homes is Easy and Low Cost
- 79 ...... Small Berms or Floodwalls May Protect Older Buildings
- 80 ...... Some Flood Mitigation Projects are More Costly Up Front

#### **SAFETY AND PREPAREDNESS**

- **81** ...... StormAware: Turn Around Don't Drown®
- **82** ...... Be Prepared for Flood Emergencies

#### **RESOURCES**

- 83 ...... Useful Resources and Common Acronyms
- 84 ...... Want to Learn More?


#### **About This Guide**


This **Quick Guide** helps local officials and citizens understand why and how Minnesota communities must manage development in floodplains to protect people and property. Flood-prone communities adopt codes and ordinances that detail the rules and requirements. In cases of conflict, those codes and ordinances, not the guidance provided in this publication, must be followed.

This **Quick Guide** was developed and funded jointly by the Minnesota Department of Natural Resources (MNDNR) and the Federal Emergency Management Agency (FEMA).

Questions, comments and requests for additional copies should be directed to the MNDNR Division of Ecological and Water Resources at floodplain.dnr@state.mn.us.

For more detail on all aspects of floodplain management, please refer to FEMA 480, National Flood Insurance Program, Floodplain Management Requirements: A Study Guide and Desk Reference for Local Officials

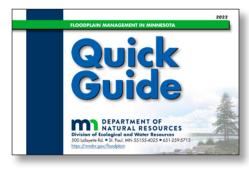

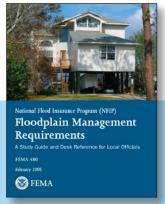

Prepared by:

RCQuinn consulting, inc.

#### Why Do We Regulate the Floodplain?

**To protect people and property.** Implementing floodplain management regulations reduces vulnerability to future flood risk. If we know low lying land will flood from time to time, we should make reasonable decisions to help protect our families, homes, and businesses.

**To make sure NFIP flood insurance is available.** Communities must join the NFIP and administer floodplain management requirements before residents and businesses can purchase NFIP flood insurance and be eligible for some types of Federal assistance, including flood mitigation grants.

**To save tax dollars.** Every time communities experience flood disasters local budgets are impacted. If we build smart, we'll have fewer problems the next time the water rises. Remember, Federal disaster assistance is not available for all floods. Even when the President declares a disaster, communities still must pay a portion of repair and clean-up costs, temporary housing assistance, and evacuation expenses.

**To avoid liability and lawsuits.** If we know an area is mapped as a flood hazard area, and if we know people could be in danger and buildings could be damaged, doesn't it make sense to take reasonable protective steps as our communities develop and redevelop?

Since 1978, NFIP flood insurance policy holders in Minnesota have received over \$148 million in claim payments. Most of the State's flood-prone property owners do not have flood insurance.

#### Minnesota Disaster and Floodplain Facts




Number of Declarations by County (1965 to mid-2017)







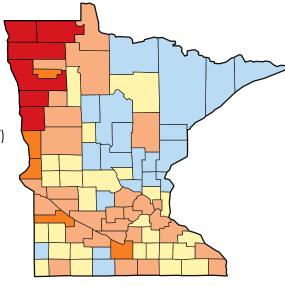

Most flood events are not declared major disasters.

Many floods are local, affecting only small areas such as several homes, a limited number of communities, or a few watersheds.

- More than 80% of Minnesota's declared disasters involved flooding. Winter storms, winds, and tornadoes account for the rest.
- Most counties, cities and towns in Minnesota have identified floodprone areas shown on Flood Insurance Rate Maps.
- Thousands of buildings and other structures are located in identified floodprone areas, called Special Flood Hazard Areas (SFHAs).
- Flood maps have not been prepared for many waterways.
- Eighty-four municipalities are floodprone but elect to not participate in the National Flood Insurance Program and do not enforce floodplain management regulations (as of September 2022).

#### What is the National Flood Insurance Program?

The National Flood Insurance Program (NFIP) was created by Congress in 1968 to protect lives and property and to reduce the financial burden of providing disaster assistance. The NFIP is administered by the Federal Emergency Management Agency (FEMA). Nationwide, over 22,300 communities participate in the NFIP. In Minnesota, more than 620 counties, cities, towns, and tribes participate.



The NFIP is based on a mutual agreement between the Federal Government and communities. Communities that participate agree to regulate development in mapped flood hazard areas according to certain criteria and standards. The partnership involves:

- Flood hazard maps. In partnership with water management districts, communities and the State, FEMA produces flood maps in accordance with FEMA standards. The maps are used by communities, insurance agents, real estate professionals, and others.
- **Flood insurance.** Property owners and renters in participating communities are eligible to purchase NFIP flood insurance for buildings and contents.
- **Regulations.** Communities must adopt and enforce minimum floodplain management regulations so that development, including buildings, is undertaken in ways that reduce exposure to flooding.

To learn more about the NFIP, including your potential flood risk and the approximate cost of a flood insurance policy, go to FEMA's FloodSmart website <a href="www.floodsmart.gov">www.floodsmart.gov</a>.

# Local, State, Regional, and Federal Roles and Responsibilities

#### ■ Communities (city, county, township):

- Exercise zoning authority to adopt floodplain management ordinances
- Enroll in the National Flood Insurance Program (NFIP)
- Administer and enforce ordinances, maintain records (see page 6)

#### Minnesota Department of Natural Resources:

- Oversight of community floodplain management programs and approval of ordinances
- Technical assistance and training
- Assist with some flood study data and mapping
- Coordinate between FEMA and communities
- Watershed Districts: May have overlapping floodplain management regulations and may be sources of floodplain data
- **FEMA:** Oversees NFIP (enrolls communities; can act to suspend or put communities on probation); and produces and approves flood studies and flood maps and changes to flood maps



# **Community Responsibilities**

To participate in the National Flood Insurance Program, Minnesota communities agree to:

- **Recognize** flood hazards in community planning (see page 7)
- Adopt and enforce flood maps and floodplain management ordinance
- **Require** permits for all types of development in the floodplain (see page 37)
- **Assure** that building sites are reasonably safe from flooding
- **Require** new and substantially improved homes and manufactured homes to be elevated at or above the Regulatory Flood Protection Elevation (RFPE) (BFE + 1 to 1.5 ft.)
- Require non-residential buildings to be elevated at or above the RFPE (BFE + 1 to 1.5 ft.), or dry floodproofed
- **Determine** if damaged buildings are substantially damaged
- **Conduct** field inspections; cite and remedy violations
- Require and maintain surveyed elevation information to document compliance (<u>see pages 46</u>, <u>47</u>, and <u>49</u>)
- Carefully consider requests for variances
- **Resolve** non-compliance and violations of floodplain management requirements
- Advise and work with FEMA and the MNDNR Floodplain Program when updates to flood maps are needed
- **Maintain** records for review and respond to periodic requests for reports to FEMA

# **NFIP Recommended Planning Considerations**

Minnesota communities should consider incorporating planning considerations into comprehensive plans, land development codes, floodplain management regulations, and multi-hazard mitigation plans to reflect the long-term goal of increasing resiliency to future flooding. NFIP regulations (44 CFR Section 60.22(c)) outline 19 factors for consideration, including:

- **Divert development** to areas outside the SFHA to reduce flood damage
- Full public disclosure to potential buyers of properties in the SFHA
- Acknowledge that SFHA development may increase flood risk of existing development
- **Improve local drainage** to control increased runoff that increases the probability of flooding on other properties
- Require additional elevation above the State minimum (e.g., BFE + 2 or 3 ft.)
- Require elevation methods such as pilings or columns rather than fill to maintain the storage capacity of the floodplain and to minimize environmental impacts
- Require evacuation plans for manufactured home parks, subdivisions, and campgrounds (including recreational vehicle parks)

# Flood Insurance: Property Owner's Financial Protection

Who must purchase flood insurance? Flood insurance is required for all buildings in mapped high risk flood zones shown on FEMA's maps when financed by Federally-backed loans or mortgages.


Who can purchase flood insurance? All homeowners, business owners, and renters in communities that participate in the NFIP (over 96% of Minnesotans) may purchase NFIP flood insurance on any building and its contents, even if outside of the mapped flood zone. Owners are encouraged to buy flood insurance even if not

required by mortgage lenders because buildings in mapped flood zones are five times more likely to be damaged by flooding than by major fires.

**Not in a mapped flood zone?** Unfortunately, it's often after a flood when many people discover their home or business property insurance does NOT cover flood damage. Approximately 50% of all flood damage occurs in low risk zones, commonly described as being "outside the mapped flood zone."

What about disaster grants and loans? Federal disaster grants are only available after the largest floods, do not cover most losses and repayment of a disaster loan can cost many times more than the cost of a flood insurance policy.

**Want to know more?** Learn more at <a href="https://www.floodsmart.gov">www.floodsmart.gov</a>. To purchase a policy, call your insurance agent.

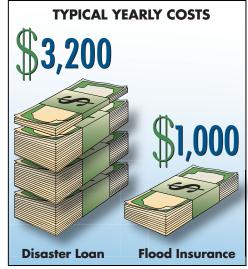

#### The NFIP's Community Rating System (CRS)

The NFIP recognizes communities that achieve better flood resiliency by providing policy holders with reduced flood insurance premiums. Communities must apply to participate in CRS and commit to implement and certify activities that contribute to reduced flood risk. Examples of actions communities can take to reduce the cost of flood insurance premiums include:

- **Preserve** open space in the floodplain
- **Enforce** higher standards for safer development through zoning, stormwater, subdivision, and floodplain management ordinances
- Develop hazard mitigation plans and watershed and storm management plans
- **Undertake** engineering studies and prepare flood maps
- **Obtain** grants to buy out or elevate houses or to floodproof businesses
- Maintain drainage systems
- Monitor flood conditions and issue warnings
- **Inform** people about flood hazards, flood insurance, and how to reduce flood damage

Property owners in 9 Minnesota communities that participate in the CRS receive premium discounts ranging from 5% to 25% (as of October 2022).




Community officials can request assistance from CRS specialists to help with the application process and prerequisites. Check the online CRS Resource Center (see page 83).

#### FLOODPLAINS AND FLOOD MAPS

- 10 ..... Looking for FEMA Flood Map Information?
- 11 ..... FIRMette: FEMA Flood Maps Online
- 12 ..... Understanding the Riverine Floodplain
- 13 ..... New Format Flood Insurance Rate Maps
- 14 ..... "Pre-1988" Flood Insurance Rate Maps
- 15 ..... "Pre-1988" Flood Boundary and Floodway Map
- 16 ..... Using the Riverine Flood Profile to Determine Riverine BFEs
- 17 ..... Understanding the Floodway
- 18 ..... Floodway Data Table
- 19 ..... Regulatory Flood Protection Elevation (RFPE)

#### **Looking for FEMA Flood Map Information?**

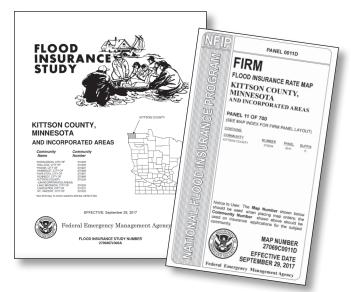


- Flood Insurance Studies (FISs) are compilations of flood risk information used for community planning and development.
- Flood Insurance Rate Maps (FIRMs) show regulated flood zones and where flood insurance is required.
- Access FIRMs at the FEMA Map Service Center, https://msc.fema.gov. Enter an address or use the <Search All Products> to see and download current, preliminary, pending, and historical flood maps and other products.
- See which counties have current and preliminary FEMA FISs and maps, and related links, at MNDNR Find Flood Maps site (see page 11).
- Many cities and counties also make digital flood maps available online, often with other data layers.

**Need a fast answer?** Community planning, engineering, or permit offices may also have paper flood maps available for viewing by the public.

Learn more by watching the MNDNR video <u>Is My House in the Floodplain</u>.


#### FIRMette: FEMA Flood Maps Online

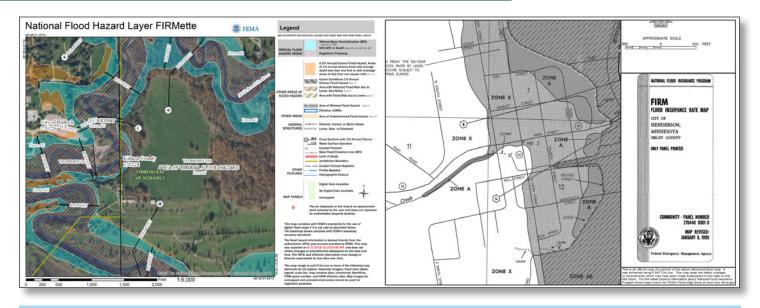

Portions of FEMA flood maps can be produced, saved, and printed by making "FIRMettes." FIRMettes are full-scale sections for FIRMs. Check out "How to Download" instructions at MNDNR
<a href="https://www.dnr.state.mn.us/waters/watermgmt\_section/floodplain/access-flood-maps.html">https://www.dnr.state.mn.us/waters/watermgmt\_section/floodplain/access-flood-maps.html</a>.

Go to <a href="https://msc.fema.gov">https://msc.fema.gov</a> and check out the MSC Frequently Asked Questions.

#### **Understanding the Riverine Floodplain**

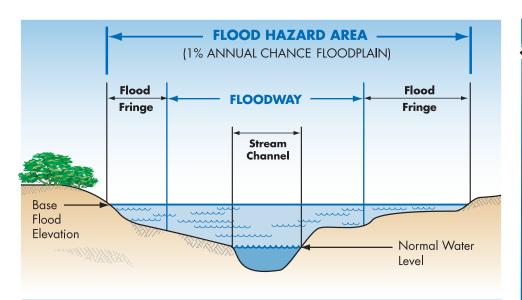


For riverine floodplains with Base Flood Elevations (BFEs) determined by detailed flood studies, the Flood Profile in the Flood Insurance Study shows water surface elevations for different frequency floods (see page 16).



The **Special Flood Hazard Area (SFHA)** is that portion of the floodplain subject to inundation by the base flood (1% annual chance) and/or flood-related erosion hazards. Riverine SFHAs are shown on FIRMs as Zones A, AE, AH, AO, AR, and A99. Older FIRMs may have Zones A1-A30.


<u>See page 17</u> to learn about the floodway, the area of the SFHA where flood waters usually are deeper and flow faster.

#### **New Format Flood Insurance Rate Maps**

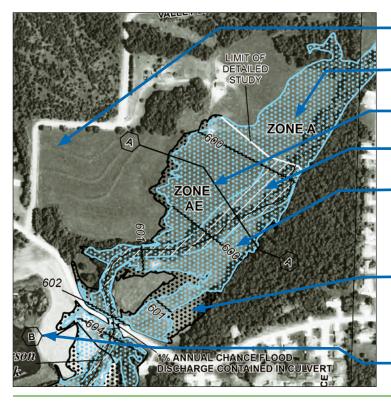

- Unshaded Zone X is all other areas considered low risk (formerly Zone C).
- **Zone A** (approximate) is the flood hazard area without BFEs.
- Zone AE is the 1% annual chance (100-year) floodplain with BFEs (formerly Zones A1- A30).
- The **Floodway** is the cross-hatched area (see page 17).
- 5 Base Flood Elevation (BFE) is the water surface elevation of the base flood rounded to the nearest whole foot above the vertical datum shown on the map (consult FIS profiles and tables for more accurate elevations).
- **Shaded Zone X** is the 0.2% annual chance (500-year) floodplain, SFHAs with average flood depths less than 1 foot or with drainage areas less than 1 square mile, and areas behind accredited levees (formerly Zone B).
- **Cross Section** location, see flood profile (page 16) and Floodway Data Table (page 18).

#### "Pre-1988" Flood Insurance Rate Maps

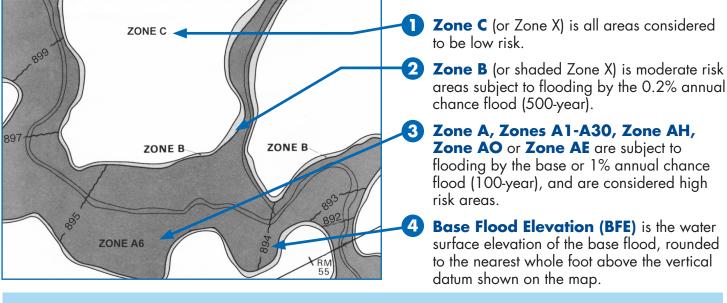


FEMA prepares Flood Insurance Rate Maps (FIRMs) to show areas that are at high risk of flooding.

These "pre-1988" FIRMs, and companion Flood Boundary and Floodway Maps,

are being replaced as part of the FEMA's Risk Map Program.


#### "Pre-1988" Flood Boundary and Floodway Map

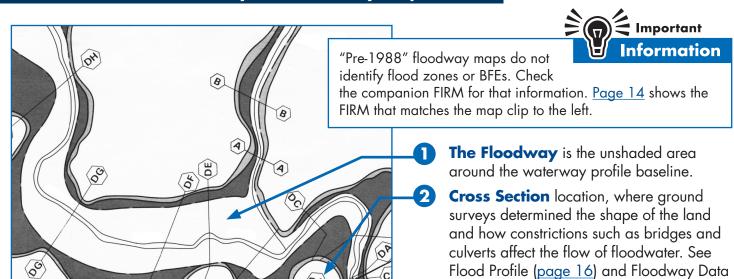

FEMA prepared floodway maps as companions to many "pre-1988" FIRMs. You should check to see if your project will be in the floodway because additional engineering will be required (see page 41).

Table (page 18) in the Flood Insurance Study to determine BFEs at cross sections.


#### **Using the Riverine Flood Profile to Determine Riverine BFEs**

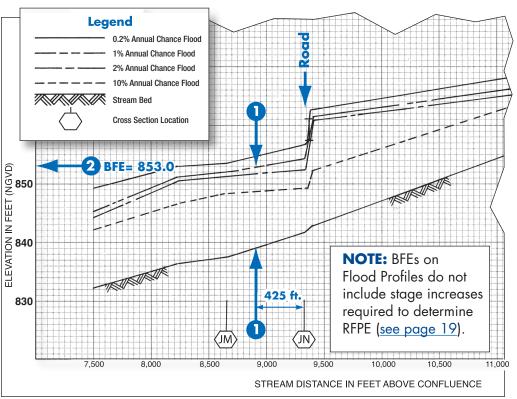

Flood Profiles from Flood Insurance Study reports can be used to determine the BFE at a specific site. Profiles also show estimated water surface elevations for floods other than the 1% annual chance flood (100-year).

- On the effective flood map, locate the site by measuring the distance, along the profile baseline of the stream channel, from a known point such as a road or cross section, for example, JM or JN.
- 2 Scale that distance on the Flood Profile and read up to the profile of interest, then across to determine the BFE, to the nearest 1/10 of a foot. (Answer: 853.0 feet).

#### **Understanding the Floodway**

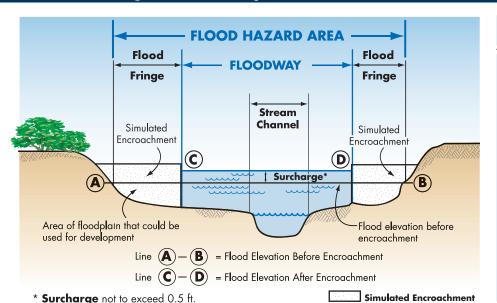



The **Floodway** is the channel of a river or other watercourse and the adjacent land areas that must be reserved in order to pass the base flood discharge without cumulatively increasing flood elevations.

Computer models are used to simulate "encroachment" or development in the flood fringe in order to predict where and how much the Base Flood Elevation would increase if the flood fringe is allowed to be developed.

For any proposed floodway development, before a local floodplain permit can be issued, the applicant must provide evidence from an experienced professional engineer that "no-rise" will occur (see page 41). If ANY increase (more than 0.00 ft.) will occur, a Conditional Letter of Map Revision (CLOMR) must be obtained from FEMA (see page 32). MNDNR approval is required to obtain a CLOMR, and cumulative water surface increases of up to 0.50 ft. (with the proposed project) may be permitted if the increases do not cause "increased flood damage potential" (including no impacts on existing buildings).

# Floodway Data Table

Flood Insurance Studies have Floodway Data Tables for every waterway that was studied by detailed methods for which floodways were delineated.

FLOODING SOURCE		FLOODWAY			1-PERCENT-ANNUAL-CHANCE-FLOOD WATER SURFACE ELEVATION			
CROSS SECTION	DISTANCE <sup>1</sup>	WIDTH (FEET)	SECTION AREA (SQUARE FEET)	MEAN VELOCITY (FEET PER SECOND)	REGULATORY (FEET NAVD)	WITHOUT FLOODWAY (FEET NAVD)	WITH FLOODWAY (FEET NAVD)	INCREASE (FEET)
MIDDLE BRANCH OF LITTLE CEDAR RIVER								
Α	1,860	220	820	2.3	1,277.1	1,277.1	1,277.1	0.0
В	3,100	200	644	2.8	1,279.1	1,279.1	1,279.2	0.1
С	4,330	210	630	2.9	1,281.2	1,281.2	1,281.4	0.2
D	6,590	520	1,620	1.1	1,283.4	1,283.4	1,283.4	0.0
E	7,670	210	410	3.3	1,285.0	1,285.0	1,285.0	0.0
F	9,210	220	670	2.1	1,287.4	1,287.4	1,287.4	0.0
G	11,570	180	450	3.0	1,289.8	1,289.8	1,289.8	0.0

<sup>&</sup>lt;sup>1</sup>Feet above confluence with Little Cedar River


- 1 Velocity estimates based on the mean velocity data may be used to compute hydrodynamic loads.
- 2 Compute BFE (rounded values are shown on FIRMs).
- 3 Elevations may not consider backwater effect from downstream river.
- 4 Amount of allowed increase not more than 0.5 foot at any location.

#### **Regulatory Flood Protection Elevation (RFPE)**

In Minnesota, floodplain management requirements for buildings and road surfaces are measured relative to the Regulatory Flood Protection Elevation. The RFPE is determined as follows:

#### **Base Flood Elevation**

- + **Stage increase** up to 0.5 ft. due to floodway designation (0.0 ft. on lakes)
- + 1 foot (minimum) freeboard (some communities have higher freeboard)
- = RFPE

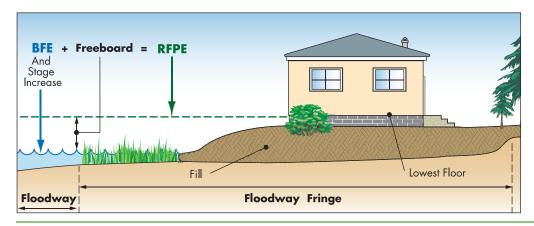

# Terms and Definitions

# Regulatory Flood Protection Elevation


(RFPE) is an elevation not less than one foot above the elevation of the regional flood plus any increases in flood elevation caused by floodplain encroachments (stage increase) that result from designation of a floodway.

**Regional Flood** is also known as "base flood," "one-percent (1%) annual chance flood," and the "100-year flood."

#### FLOODPLAIN DATA AND RESOURCES


- 20 ..... Approximate Zone A
- 21 ..... Sources for BFEs in Approximate Zone A Without BFEs
- 22 ..... Minnesota's Lake & Flood Elevations Online (LFEO) Application
- 23 ..... LFEO Application Options
- 24 ..... Minnesota's FEMA Hydraulic Model Download Site

#### **Approximate Zone A**

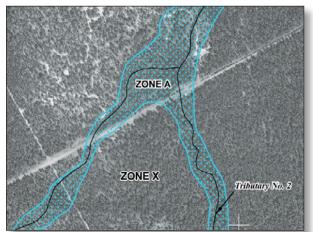

Check with community permitting offices for the best available data. BFEs must be determined in Approximate Zone A before local permits are issued. Local officials may contact MNDNR floodplain staff at floodplain.dnr@state.mn.us to request assistance with determining BFEs.

Approximate Zone A refers to SFHAs without BFEs. Older FEMA maps show Approximate Zone A boundaries determined based on very little field work. Methods have changed a lot since the early years. Data may be available at different quality levels.

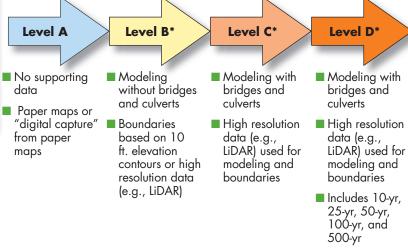

<sup>\*</sup> Quality levels B, C, and D show cross section locations and approximate BFEs. MNDNR refers to those maps as "pink line" maps (see page 21).

# Sources for BFEs in Approximate Zone A Without BFEs

When FIRMs show Zone A without BFEs (called Approximate Zone A), local officials and others must look for floodplain information from other sources to determine BFEs. Potential sources include:

- FEMA detailed studies for preliminary or pending maps
- Studies prepared by communities and watershed districts
- Lake & Flood Elevations Online (LFEO) viewer for:
  - Basins and lakes (see page 22)
  - Many streams where the approximate estimated 1% water surface elevations on "pink lines" can be used as best available data BFEs (see page 20). Use 0.5 ft. for the stage increase to calculate the RFPE (see page 19).



Sample showing "pink lines," which are estimated 1% Water Surface Elevations that can be used as best available data BFEs.

Find BFEs and other flood elevations at <a href="https://www.dnr.state.mn.us/waters/watermgmt\_section/floodplain/bfe.html">https://www.dnr.state.mn.us/waters/watermgmt\_section/floodplain/bfe.html</a>. Community officials, surveyors, and others can check with MNDNR Area Hydrologists or floodplain staff (floodplain.dnr@state.mn.us) for other sources.


# Minnesota's Lake & Flood Elevations Online (LFEO) Application

Use the **Lake & Flood Elevations Online (LFEO)** application to view and download detailed flood elevations for:

- Lakes and basins shown on FIRMs with BFEs (BFEs rounded to nearest foot)
- Lakes and basins with flood elevation data from other sources when MNDNR determines the data meet minimum quality standards

Available data may include:

- MNDNR basin name and number
- Study date and source
- Datum
- Ordinary High Water
- Flood elevations, if available, for:
  - □ 10-year (10% annual chance)
  - 25-year (4% annual chance)
  - □ 50-year (2% annual chance)
  - □ 100-year (1% annual chance)
  - □ 500-year (0.2% annual chance)

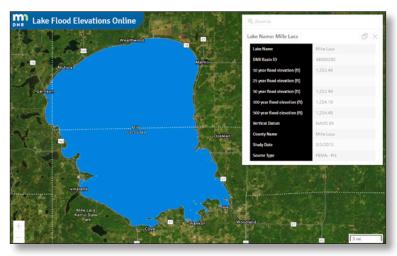

Access the Lake & Flood Elevations Online (LFEO) at: <a href="https://arcgis.dnr.state.mn.us/ewr/lake\_floodplain/">https://arcgis.dnr.state.mn.us/ewr/lake\_floodplain/</a>

# **LFEO Application Options**

In 2021, MNDNR added new layers and features to the Minnesota Lake & Flood Elevations Online application (see page 22).

Layers: In addition to lakes and basins

- 2-foot elevation contours (NAVD88 datum)
- FEMA flood hazard areas, cross-section and BFE lines (where digital FIRMs available)
- 1% annual chance water surface elevations (aka "pink lines") for BFE estimates
- MNDNR's Unmodernized floodplain layer (where paper FIRMs available)
- Parcel boundaries
- Public Waters

**Tools:** Measuring (length and area) and latitude / longitude for spot location

#### Report options:


- Map of chosen areas and layers
- Basin report with flood elevations, Ordinary High Water, and highest recorded flood elevations



User hints for layers legend:

- Olick on "eye" symbol to turn layer off/on
- Click on "pointer" to show expanded layers
- 3 Transparency option: Click on three dots to right of layer name, then increase or decrease opacity

#### Minnesota's FEMA Hydraulic Model Download Site

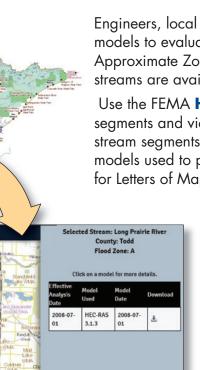

Engineers, local officials and others sometimes need to use hydraulic models to evaluate proposed projects or determine flood elevations in Approximate Zone A. Hydraulic models prepared by FEMA for many streams are available online

Use the FEMA **Hydraulic Model Download Site** to select stream segments and view and download hydraulic model information. Some stream segments may have multiple models, including the original models used to produce FIRMs, updated models, and models developed for Letters of Map Revision.

Access the FEMA Hydraulic Model Download Site online at: <a href="https://arcgis.dnr.state.mn.us/ewr/hydra\_model\_download/index.html">https://arcgis.dnr.state.mn.us/ewr/hydra\_model\_download/index.html</a>. MNDNR may have models that are not yet available on this site.

Contact MNDNR floodplain staff

(floodplain.dnr@state.mn.us).

#### FIRM AMENDMENTS AND REVISIONS


- 25 ..... FIRM Revisions: Letters of Map Revision (LOMA)
- **26** ..... Are Building Sites Higher than the BFE?
- 27 ..... LOMAs: "Out as Shown"
- **28** ..... Options to Document Structures are Not in SFHAs
- 29 ..... More on LOMAs: Using LiDAR Topography
- **30** ..... More on LOMAs: Basements and Decks
- **31** ..... FIRM Revisions: Letters of Map Revision Based on Fill (LOMR-F)
- 32 ..... FIRM Revisions: CLOMRs and LOMRs
- 33 ..... Levee Certification for FIRMs

#### FIRM Revisions: Letters of Map Revision (LOMA)

The most accurate information available is used to make flood maps, including topographic base maps and detailed engineering methods or methods of approximation. FEMA issues map revisions if technical data are submitted to support the changes.

**Letter of Map Amendment (LOMA)** is an official amendment to an effective FIRM that may be issued when a property owner provides additional technical information from a professional land surveyor, such as elevation of the natural ground (no fill) relative to the BFE.


- FEMA does not charge a fee to process LOMA requests.
- Lenders may waive the flood insurance requirement if the LOMA removes a building site from the SFHA because natural ground at the site is at or above the BFE.

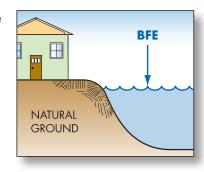

Property owners who place fill to raise sites above the BFE can request Letters of Map Revision based on Fill (LOMR-Fs) described on page 31.

Access to FEMA's web-based application for professional land surveyors to submit eLOMAs is <a href="https://hazards.fema.gov/femaportal/resources/whatiseloma.htm">https://hazards.fema.gov/femaportal/resources/whatiseloma.htm</a>.

#### Are Building Sites Higher than the BFE?

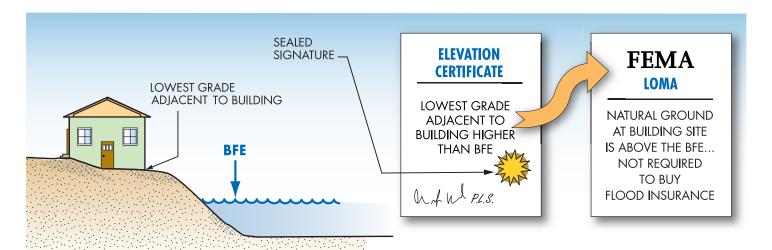

If land is shown on the map as "in" the SFHA, but the building site is higher than the Base Flood Elevation (BFE)... get a professional land surveyor to complete a FEMA Elevation Certificate (EC). Submit a request for a Letter of Map Amendment (LOMA) to FEMA along with the EC to verify that the structure is above the BFE (see page 25). If FEMA approves the request, lenders are not required to have property owners get flood insurance policies, although some may still require them.

Owners should keep certificates and LOMAs with deeds—the documentation will help future buyers.

#### LOMAs: "Out as Shown"

- Mortgage lenders that are regulated or insured by the Federal Government are mandated to require flood insurance when structures are in, or touch, the SFHA.
- Lenders sometimes perform automated determinations, where computers compare parcel locations to the SFHA map.
- Owners can ask lenders to reconsider determinations. Documentation may be required to clearly show a structure is outside of the SFHA. Lenders may require FEMA LOMAs, especially if it is a close call.
- Lenders have discretion to require flood insurance even when structures are not in the SFHA (usually occurs when a portion of the lot is in the SFHA).

See page 28 for documentation required for lenders or that is required to seek Letters of Map Amendment from FEMA to show structures are not in SFHAs, sometimes called "out as shown."




Red Circle: A corner of the structure is in the SFHA. Lenders must require flood insurance unless the owner obtains a Letter of Map Amendment from FEMA.

Yellow Circles: Structures clearly not in the SFHA, but parts of the lots may be in. (Flood insurance is not mandatory, but is encouraged.)

#### **Options to Document Structures are Not in SFHAs**

Sometimes property owners are asked to provide evidence their buildings and structures are not in SFHAs

- Most mortgage lenders will accept FIRMettes (see page 11) as evidence that structures are not in SFHAs
- Lenders may require maps provided by a community, surveyor, or engineer that clearly show structures are not in SFHAs.
- Owners can ask lenders to reconsider determinations. Documentation may be required to clearly show a structure is outside of the SFHA. Lenders may require FEMA LOMAs, especially if it is a close call.

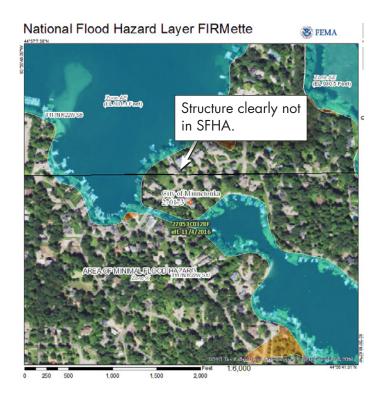

### More on LOMAs: Using LiDAR Topography

Owners can obtain LOMAs to show buildings are not in SFHAs if 2-foot contour topographic mapping developed using LiDAR technology clearly shows an entire structure is on land that is at least 1 foot (half a contour interval) above the BFE and the site was not filled to make it higher than the BFE. A field survey may not be required.

- Acceptable maps are prepared by community officials, licensed surveyors, or professional engineers.
- Maps must include:
  - Aerial photo, with building identified
  - 2-foot contours (including date and source) available in all Minnesota
  - Contour below, but not touching, structure identified
  - BFE elevation
  - ☐ Address (or legal description) & parcel boundary
  - Scale and north arrow



This example based on county GIS shows the building is entirely above the contour shown in blue, which is more than 1 foot above the BFF

Access MNDNR Letter of Map Amendments Using Lidar Elevation Data instructions at https://www.dnr.state.mn.us/waters/watermgmt\_section/floodplain/loma-lidar.html


#### More on LOMAs: Basements and Decks

Owners can obtain LOMAs to show buildings are not in SFHAs even when buildings have basements, provided:

- Earthen fill has not been placed since date of the first FEMA map showing the site in the SFHA.
- The Lowest Adjacent Grade (LAG) is at or above the BFE.

Owners can obtain LOMAs to show buildings are not in SFHAs when buildings have decks or stairs, provided:

- The Lowest Adjacent Grade (LAG) at the lowest deck or stair support is at or above the BFE
- Documentation that the deck or stairs are detached (not structurally connected), as long as the LAG next to the building is at or above the BFE.

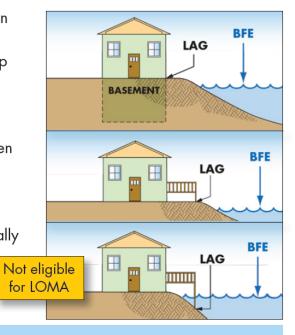

For new buildings, communities may still require minimum floor elevations if sites are not in SFHAs, but are in Shoreland Districts (see page 40), or if the community has other local requirements.

#### FIRM Revisions: Letters of Map Revision Based on Fill (LOMR-F)

The most accurate information available is used to make flood maps, including topographic base maps and detailed engineering methods or methods of approximation. FEMA issues map revisions if technical data are submitted to support the changes.


**Letter of Map Amendment Revision Based on Fill (LOMR-F)** is an official FEMA determination that a structure or parcel of land has been elevated by fill above the BFE, and therefore is no longer in the SFHA for federal mandatory flood insurance purposes. Minnesota law requires additional steps to remove a structure or parcel of land from the SFHA for regulatory purposes.

To qualify for a LOMR-F, both the lowest floor (including basement or crawlspace), and the lowest point where fill is next to the building, must be at or above the BFE. Also:

- The application includes a Community Acknowledgement Form for the local official to state if the proposed fill complies with floodplain management regulations.
- The applicant must pay a fee to FEMA.

Property owners whose building sites are in the SFHA but on natural ground that is above the BFE can request Letters of Map Amendment (LOMAs) described on page 25.

Check NFIP Technical Bulletin #10 to learn more about elevating building sites on fill to be reasonably safe from flooding. Guidance on map revisions is available online <a href="https://www.fema.gov/flood-maps/change-your-flood-zone/loma-lomr-f">https://www.fema.gov/flood-maps/change-your-flood-zone/loma-lomr-f</a>.

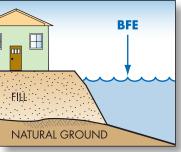

#### FIRM Revisions: CLOMRs and LOMRs

**Conditional Letter of Map Revision (CLOMR)** comments on whether a proposed project, if built as shown on the submitted documentation, would meet the standards for a map revision. Communities should require this evidence prior to issuing permits for fill or alteration of a watercourse. Certificates of Occupancy/Compliance should be withheld until receipt of the final LOMR based on "as-built" documentation and certification.

**Letter of Map Revision (LOMR)** is an official revision to an effective FIRM that may be issued to change flood insurance risk zones, special flood hazard areas and floodway boundary delineations, BFEs and/or other map features. Projects that might cause those changes include bridge and culvert replacements, levees, and alteration or relocation of channel. See page 52 for projects that involve fill in the flood fringe.

- FEMA may waive fees in some circumstances, such as when "better data" is provided (but no project is proposed) and for projects that involve habitat restoration.
- Lenders may waive the insurance requirement if approved LOMRs show buildings to be outside of the SFHA.



**CLOMRs:** CLOMRs are required when proposed projects in floodways (see pages 41 and 42) cause any increase in BFEs.

LOMRs: Applicants must submit documentation showing projects were built in conformance with CLOMR submittals before FEMA issues LOMRs to change FIRMs. LOMRs are required when projects cause any increase in BFE, or cause a decrease in BFE of 0.1 ft. or more.


Learn more about Map and Technical Resources and download the LOMR/CLOMR Guide for State-specific information at www.dnr.state.mn.us/waters/watermgmt\_section/floodplain/tech\_resources.html

#### **Levee Certification for FIRMs**

Many levees are designed to protect land against flooding from the Base Flood. In order for FEMA to show those areas as outside of the Special Flood Hazard Area, communities and levee owners must certify that levees meet certain design criteria and obtain a Letter of Map Revision (see page 32). Certification will present significant challenges during the map revision process.

Communities that have levees should determine as soon as possible whether certification will be required. Pursuant to FEMA's Procedural Memoranda 34 and 43, and as outlined in Federal regulations at 44 CFR Section 65.10, the documentation requirements address:

- Freeboard
- Closures
- Embankment protection for erosion
- Embankment and foundation stability
- Settlement
- Interior drainage and seepage
- Operation and maintenance plans
- Other site specific criteria

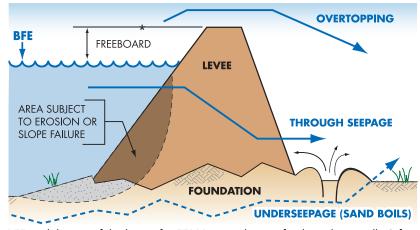

<sup>\*</sup> Freeboard is the distance between the BFE and the top of the levee; for FEMA accreditation freeboard is usually 3 feet


#### **CONSIDERATIONS FOR SITING DEVELOPMENT**

**34** ..... Floods Don't Always Stop at the BFE

35 ..... Avoid SFHAs When Possible

**36** ..... Fill Can Adversely Affect Floodplain Functions

#### Floods Don't Always Stop at the BFE

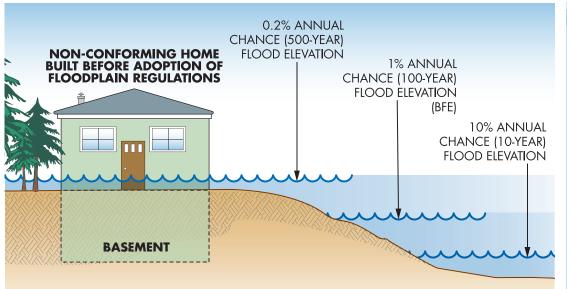




Many people don't understand just how risky building in flood zones can be. There is a greater than 26% chance that a non-elevated home in the SFHA will be flooded during a 30-year mortgage period. The chance that a major fire will occur during the same period is less than 5%!

**CAUTION!** Major storms and flash floods can cause flooding that rises higher than the Base Flood Elevation (BFE). Be safer – protect your home or business by avoiding flood zones or building higher. See page 43 to see how this may save you money on flood insurance.

#### **Avoid SFHAs When Possible**

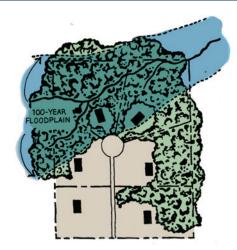



All land subdivided into lots, some homesites and lots partially or entirely in the floodplain.

#### **NOT RECOMMENDED**

All land subdivided into lots, some lots partially in the floodplain, setbacks modified to keep homesites on high ground.

#### **RECOMMENDED**

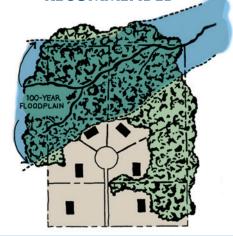

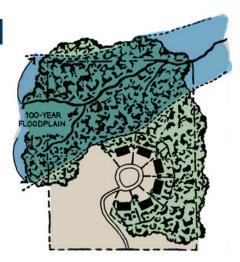

Floodplain land put into public/ common open space, net density remains, lot sizes reduced and setbacks modified to keep homesites on high ground.


#### **RECOMMENDED**

Let the floodplain perform its natural function – if possible, keep it as open space. Other compatible uses: Recreational areas, playgrounds, reforestation, unpaved parking, gardens, pasture, and created wetlands.

## Fill Can Adversely Affect Floodplain Functions

Floodplains are supposed to store and convey floodwater. If storage space is blocked by fill material, future flooding may be worsened. Fill may change drainage and adversely affect adjacent properties. Fill can alter

valuable floodplain functions, including wildlife habitat, wetlands, and groundwater infiltration. Communities may apply the floodway restrictions on fill to the entire floodplain.

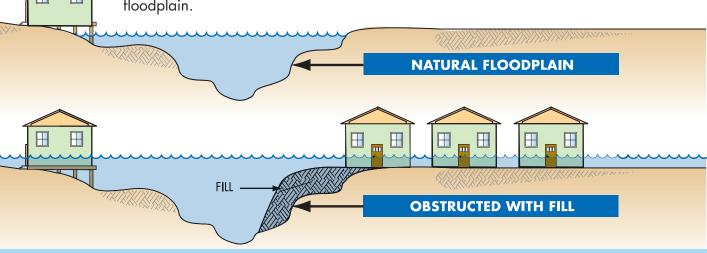

Public waters work permits from MNDNR may be required for alterations below the Ordinary High Water Line. Buildings and fill to support buildings and other development are not permitted below the OHWL.

#### **FUNDAMENTALS FOR ALL DEVELOPMENT**

- **37** ..... Development in SFHAs Requires Local Permits and Approvals
- **38** ..... Some Key Floodplain Development Permit Review Steps
- **39** ..... Minimum Requirements Based on Actual Ground Elevations
- 40 ..... Minimum Elevation Requirements in Shoreland Districts
- **41** ..... The Floodway "No-Rise" Certification
- 42 ..... Limiting Rises Where Floodways Not Delineated
- 43 ..... Freeboard: Build Higher, Reduce Damage, Save on NFIP Insurance
- **44** ..... Variances From Elevation Requirements

## **Development in SFHAs Requires Local Permits and Approvals**

- Construction of new buildings
- Additions to buildings
- Improvements to buildings
- Renovation of building interiors
- Repair of damaged buildings
- Placement of manufactured (mobile) homes
- Subdivision of land
- Construction or placement of temporary buildings and accessory structures
- Construction of agricultural buildings
- Construction of roads, bridges, and culverts
- Placement of fill, grading, excavation, mining, and dredging
- Alteration or relocation of stream channels



**Development** is any manmade change to improved or unimproved real estate, including but not limited to, buildings or other structures, tanks, temporary structures, temporary or permanent storage of equipment or materials, mining, dredging, filling, grading, paving, excavations, drilling operations or any other land disturbing activities.

Floodplain development or building permits must be obtained before these activities and **ANY** land-disturbing activities occur in flood zones.

## Some Key Floodplain Development Permit Review Steps

The permit reviewer must check many things. Some of the key questions are:


- Is the site in the mapped flood zone or floodway?
- Is the natural ground elevation below the BFE?
- Is the site in the Shoreland District?
- Is work proposed below Ordinary High Water? Is MNDNR permit required?
- Are applicants advised that other State or Federal permits must be obtained before work starts?
- Does the site plan show the flood zone, Base Flood Elevation and building location?
- Is substantial improvement or repair of substantial damage proposed?
- Is an addition proposed?
- Will new buildings and utilities be elevated properly?
- Is a Conditional Use Permit (CUP) required?
- Will manufactured homes be properly elevated and anchored?
- Do the plans show an appropriate and safe foundation?
- Are all required design certifications submitted?
- Will the owner/builder have to submit an as-built Elevation Certificate?

Review Checklist			
	Floodplain		
	Floodway		
	RFPE		
	MNDNR Permit		
	Shoreland District		
	New Construction		
	Improved Existing Bldg.		
	Elevated		
	CUP		
	Elevation Certificate		
	Issue Permit		

#### Minimum Requirements Based on Actual Ground Elevations

Older FIRMs sometimes were drawn with SFHAs boundaries that are not consistent with the actual ground elevations. More recent FEMA studies and maps are based on improved supporting data when BFEs are determined. Revised maps delineate SFHA boundaries on updated topographic mapping.

- In Minnesota, development on land that is below the BFE must meet floodplain requirements, even if not in the FEMA-mapped SFHA (see Site 1).
- Owners with land that is actually above the BFE (see Site 2) may be able to build basement or crawlspace foundations and still meet the RFPE, and they can apply to FEMA for a Letter of Map Amendment (see page 25).

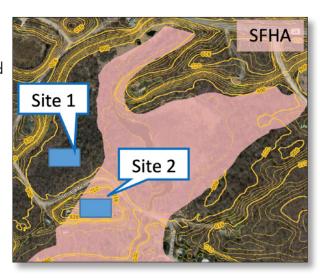





MN Rule 6120.5700, subp.3, D: "Where a conflict exists between the floodplain limits illustrated on the official zoning map and actual field conditions, the flood elevations shall be the governing factor in locating the regulatory floodplain limits."

#### **Minimum Elevation Requirements in Shoreland Districts**

In Minnesota, buildings that are outside of FEMA mapped high risk flood zones (SFHAs) but in Shoreland Districts must have lowest floors at or above minimum elevations when communities adopt Shoreland Management ordinances.

- If a flood study is available, lowest floors must be at or above the RFPE (see page 19).
- If a flood study is not available, lowest floors must be at least 3 feet above the Ordinary High Water Level (OHWL) or highest known water level, whichever is higher

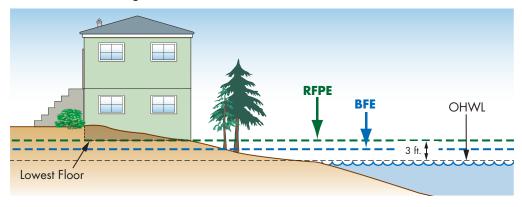

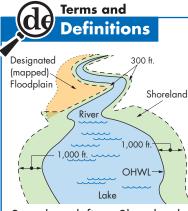

State law defines Shoreland as the land located:

- within 1,000 feet of OHWL of lake, pond, or flowage; and
- (2) within 300 feet of river or stream, or the landward edge of mapped floodplain, whichever is greater

## The Floodway "No-Rise" Certification

- Floodways convey the largest volume of water and may have high velocities.
- State law restricts development in floodways.
- Engineers must prepare floodway encroachment analyses to evaluate the hydraulic impact of proposed development (includes grading/filling, new/replacement culverts and bridges, and bank stabilization).
- Development is not allowed unless certified to cause "no-rise" (0.00 ft. increase) in BFEs.
- Fencing in floodways should be "open" to allow floodwater to flow through; solid and chain link fencing are floodway encroachments.
- "No-rise" certifications must be signed by a Professional Engineer licensed in Minnesota and qualified to conduct hydraulic analyses.
- Download the "No-Rise" Certification form from Floodplain Administration Resources on MNDNR's Floodplain Regulations web page (see page 83).

#### **ENGINEERING "NO-RISE" CERTIFICATION**

Community: Anytown, MN
Applicant: ABC Developers, Inc.
Address: 210 River Road

This is to certify that I am a duly qualified professional engineer licensed to practice in the State of Minnesota. It is further to certify that the attached technical data supports the fact that the described project will not impact the floodway width or 1% elevation (will not raise or lower by more than 0.00 ft.) of said flooding source in the Flood Insurance Study for the above community dated [date of FIS] and will not impact the 1% elevation at unpublished cross-sections in the vicinity of the proposed development.





The floodway encroachment analysis must be based on technical data obtained from FEMA.

Reduce flood risk - don't build in the Floodway!

## **Limiting Rises Where Floodways Not Delineated**

**Buildings and Structures.** New buildings and structures, substantial improvements, and additions are not permitted in Zone A or Zone AE where floodways have not been delineated, unless applicants provide certification prepared by experienced Professional Engineers that show sites are flood fringes, without causing flood level increases more than Allowable Increases (below).

**Other Development.** When development such as filling, grading, alteration of a watercourse, and culverts and bridges are proposed where floodways have not been delineated, communities must determine proposed projects will not cause more than Allowable Increases (below).

**Allowable Increases (Rises).** In Zone A and Zone AE where floodways have not been delineated, allowable cumulative increase (rise) in flood level is:

- Up to 0.5 feet, as long as there is no increased flood damage potential (i.e., no existing buildings are in or touching the floodplain).
- No more than 0.00 feet, if existing buildings are impacted.



Flood studies and floodway/flood fringe determinations for development and subdivisions of 50 lots or 5 acres (whichever is lesser) must be certified by experienced Professional Engineers.

### Freeboard: Build Higher, Reduce Damage, Save on NFIP Insurance

**Freeboard** is additional height – a factor of safety – above the BFE. Buildings that are higher than the BFE experience less flood damage.

- Minnesota law requires at least one foot of freeboard plus any stage increase due to floodway designation (RFPE, see page 19).
- Some communities adopt higher freeboard requirements.
- Owners and builders may add more freeboard to better protect their buildings and contents.
- Owners of buildings that are elevated above the BFE may save on NFIP flood insurance premiums.



#### Possible NFIP Insurance Savings: For older buildings, some low-cost damage reduction actions may result in discounts in NFIP flood insurance premiums:

- Elevate machinery and equipment (M&E) to a higher floor.
- Install flood openings in walls of enclosures and attached garages used only for parking, building access, and limited storage.

## **Variances From Elevation Requirements**

Very specific criteria related to the property (not the owner's actions or preferences) must be satisfied to justify a variance. NFIP requirements in addition to the variance criteria in Minnesota Statutes include:

- A showing of good and sufficient cause
- Potential to result in exceptional hardship

Limitations on variances:

- Shall not allow a lower degree of flood protection than the RFPE
- Shall not cause increases in flood levels
- Shall not obstruct flood flows

A variance that allows construction or substantial improvement below the BFE does not waive the lender's flood insurance requirement. Buildings with lowest floors below the BFE may have more expensive flood insurance premiums.



Although the "hardship" standard was replaced with "practical difficulties" in State zoning enabling Statutes, hardship remains a Federal standard for variances. NFIP regulations for variances are in 44 CFR § 60.6 and guidance is in FEMA P-993, Variances and the National Flood Insurance Program.

Property owners and communities must carefully consider the impacts of variances to allow buildings below the RFPE. Not only will buildings be more likely to sustain flood damage, but NFIP flood insurance will be very costly. Communities with a pattern of granting variances may be subject to NFIP sanctions, costing all insurance policyholders even more.

#### **APPLICATIONS AND ELEVATION CERTIFICATES**

- **45** ..... Carefully Complete the Permit Application
- 46 ..... Communities Must Retain Flood Records Permanently
- 47 ..... What is the Elevation Certificate and How is it Used?
- **48** ..... Completing the Elevation Certificate
- 49 ..... Paperwork is Important for Owners


## **Carefully Complete the Permit Application**

#### Part of Floodplain Development Permit Application (only key parts shown)

Floodplain District  Floodway  Flood Fringe General Floodplain	Type of Structure  Residence Accessory Structure Commercial/Office Warehouse/Industrial Shed / Storage Other	RFPE Calculation  a. BFE* = 802.0 ft.  b. Floodway stage inc. =  c. Freeboard = 10 ft.  RFPE (add a, b & c) = 803.2 ft.	
Type of Project  ✓ New Construction  → Addition  → Repair/Maintenance  → Fence → Fill/Grading  → Culvert/Crossing  → Other	Zoning  ☑ Permitted  □ CUP □ Variance	MGVD, 1929  NGVD, 1929  NAVD, 1988  100-yr source:  Flood Insurance Study  Other	



You must get all permits **before** you work in a flood zone.

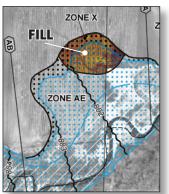

Download sample permit application from MNDNR's Floodplain Regulations web page (see page 83).

Contact the local floodplain administrator or building, planning or engineering department for application forms and guidance.

#### **Communities Must Retain Flood Records Permanently**

Communities that participate in the NFIP agree to maintain certain documentation for all development in flood zones, including:

- Permits and Conditional Use Permits (CUPs) issued and variances granted
- Floodway encroachment and watercourse alteration "no-rise" certification or Zone A hydraulic analysis
- Design certifications for dry floodproofed nonresidential buildings
- Letters of Map Change (LOMA, LOMR-F, CLOMR, and LOMR)
- Design certifications for engineered flood openings
- Determinations of whether work on existing buildings is substantial improvement or repair of substantial damage
- Surveyed "as-built" building elevations (Elevation Certificates)



Maintaining permanent records allows communities to respond to citizen inquiries and to provide documentation to FEMA and MNDNR as part of Community Assistance Visits.

#### What is the Elevation Certificate and How is it Used?

- The Elevation Certificate (EC) is a FEMA form. Go to www.fema.gov and search for "Elevation Certificate."
- The EC must be completed and signed by a professional land surveyor or qualified professional engineer licensed in Minnesota.
- Community officials may complete the EC for sites in Zone AO.
- It can be used to show that lowest grades adjacent to planned or existing building sites are above the Base Flood Elevation (see page 26).
- It is used to verify building and equipment elevations.
- Insurance agents can use ECs to determine if better NFIP flood insurance policy rates are available.

I.S. DEPARTMENT OF HOMELAND SECURITY ederal Emergency Management Agency atoms Food Insurance Program				CMB No. 1660-00 Expiration Date: N		960-0008 Date: November 30, 2022	
			TION CER				
opy all pages of th				ity official, (2) insi		ry, and (3) building owner	
		TION A - PROPERT	P INFORMATION			FOR INSURANCE COMPANY USE	
A1. Building Owner's Name				Policy Nur	iber.		
A2: Duilding Site Dox No.	A2. Building Street Address (including Apt., Unit, Suite, and/or Bidg. No.) or P.O. Route and Box No.					Company NAIC Number:	
City			State		ZIP Code		
A3. Property De	scription (Lot a	nd Blook Numbers, T	ax Parcel Number, Le	gal Description, e	HC.)		
A4. Building Use	(e.g., Residen	tial, Non-Residential,					
A5. Latitude/Lor	glude: Lat		Long.	Horizon	tel Datum: NAD	1927 NAD 1963	
A6. Attach at los	at 2 photograp	hs of the building if th	e Certificate is being	used to obtain flo	od insurance.		
A7. Building Dia	gram Number	*					
A8. For a buildin	g with a crawle	pace or enclosure(x)					
a) Square f	otage of crawl	space or enclosure(s		n pe			
b) Number of	f permanent fi	ood openings in the o			ot above adjacent g	ade	
c) Total net	area of flood or	penings in A8.b	69				
		yes Dres D					
All For a building							
	otage of attact		nd ed				
b) Number of	d permanent fi	ood openings in the ar	tached garage within	1.0 foot above a	djacent grade		
c) Total net	eres of flood op	penings in A9.b		g in			
		ga? [Yes []					
BI MERCO		CTION B - FLOOD			FORMATION	B3 State	
an see comm	any reason a c	control periodi	Mr. Cooking	reame			
M. Map/Panel	BS. Suffix	BG. FIRM Index	RZ FIRM Parel	B8. Flood	Bit Base Flood	Devation(s)	
Number		Date	Effectiver Hevised Date	Zone(s)	(Zone AO, u	(Zone AC), use Base Flood Depth)	
		Base Flood Elevation			od in Bern 89:		
FISPN	te [ FIRM	Community Deter	mined OtherSo	aroe:			
	vation datum s	used for BFE in Item 8	89: NGVO 1929	NAVO 1988	☐ Other/Source		
B11. Indicate ele		Coastal Barrier Res	ourore System (CBR)	i) area or Otherv	ine Protected Area	OPAP THE NO	
B12. Is the build			CBRS   OFA				

By itself, the EC cannot be used to waive the requirement to obtain flood insurance. See page 25 to learn about FEMA's Letter of Map Amendment process.


## **Completing the Elevation Certificate**

SECTION C - BUILDING ELEVATION INFORMATION (SURVEY REQUIRED)	
C1. Building elevations are based on: Construction Drawings* Building Under Construction*  A new Elevation Certificate will be required when construction of the building is complete.	
C2. Elevations – Zones A1–A30, AE, AH, A (with BFE), VE, V1–V30, V (with BFE), AR, AR/A, AR/AE, AR/A1–A30, AR/AH, AR Complete Items C2.a-h below according to the building diagram specified in Item A7. In Puerto Rico only, enter meters. Benchmark Utilized: Vertical Datum:	(partial)
Indicate elevation datum used for the elevations in items a) through h) below.  NGVD 1929 NAVD 1988 Other/Source:  Datum used for building elevations must be the same as that used for the BFE.	
a) Top of bottom floor (including basement, crawlspace, or enclosure floor)  623.8  Check the measurement b) Top of the next bidger floor.	rs
b) Top of the Hext Higher Hoos	
N/A	
e) Lowest elevation of machinery or equipment servicing the building (Describe type of equipment and location in Comments)	RFPE
f) Lowest adjacent (finished) grade next to building (LAG) 623.4 feet meter	rs
g) Highest adjacent (finished) grade next to building (HAG) 623.4 to feet meter	* BFE
h) Lowest adjacent grade at lowest elevation of deck or stairs, including structural support 623.4 telet meter	
In this example, the BFE is 625.0 and the RFPE is 626.5.	
The house is elevated on a perimeter wall foundation*,	<b>□ ↓ □ ↓ (9)</b>
with flood openings. The lowest floor is high enough to	
1 0	
use the enclosed area for parking and building access.	*CLIP required for elevation method other than fill

A professional land surveyor or qualified professional engineer must fill out and sign the EC form. The EC includes diagrams for different building types. Several points must be surveyed. Although an EC is required only for finished construction ("as-built"), it's a good practice to complete the EC when the lowest floor is set and prior to further vertical construction.

\*CUP required for elevation method other than fill

#### **Paperwork is Important for Owners**

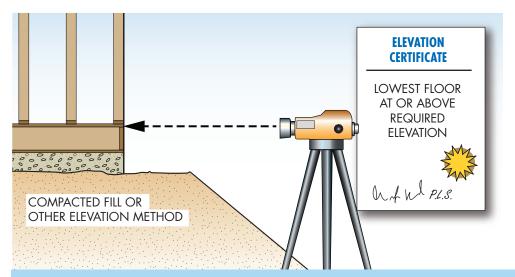



Lowest Floor means the lowest floor of the lowest enclosed area (including basement). An unfinished or flood-resistant enclosure (that is not a basement) is not the lowest floor if the enclosure is limited to parking, limited storage, and building access (see page 54) and it is built as required by local floodplain management ordinances and a CUP is obtained.

Owners should keep Elevation Certificates in a safe place. They can be used to demonstrate that buildings were compliant at the time of construction. Also, ECs can be used by insurance agents to determine if better NFIP flood insurance policy rates are available for individual policies.

"As-built" Elevation Certificates should be submitted before the final inspection. Surveyors collect information helpful to verify compliance, including flood openings and elevation of equipment (see page 47).

## **REQUIREMENTS FOR BUILDINGS**

50 Fundamentals of Flood Resistant Construction
51 How to Elevate Buildings in Flood Zone A/AE
52 Placement and Compaction of Fill in Zone A/AE
53 Basements in Flood Zones Are Unsafe
54 Enclosures Below the Lowest Floor (Zone A/AE)
55 Crawlspace* Details (Zone A/AE)
56 Utility Service and Equipment Inside Enclosures
57 Utility Service, Equipment, and Tanks (Outside)
58 Manufactured Homes Require Special Attention
59 General Requirements in Lake Superior Coastal High Hazard Areas (Zone V)

MINNESOTA QUICK GUIDE

#### **Fundamentals of Flood Resistant Construction**

Two objectives of the NFIP are to reduce flood damage and guide development to less hazard prone areas. When buildings are built in special flood hazard areas, increased resistance to flooding is achieved by the following fundamentals:


- **Foundations** capable of resisting flood loads (including dry floodproofed nonresidential buildings)
- **Lowest floors** constructed high enough so that floodwater that rises up to the elevation required by local regulations does not enter buildings
- **Equipment and utilities** elevated or designed to remain intact and be restored easily
- Enclosures below elevated floors limited to parking, limited storage, and building access and designed to minimize damage
- Flood damage-resistant materials used below elevated lowest floors



Many Minnesota communities require critical facilities to be located outside of SFHAs. When alternative sites are not available, critical facilities should be elevated higher than the RFPE or above the 0.2% annual chance floodplain (500-year).

In short ... flood resistant buildings!

#### How to Elevate Buildings in Flood Zone A/AE

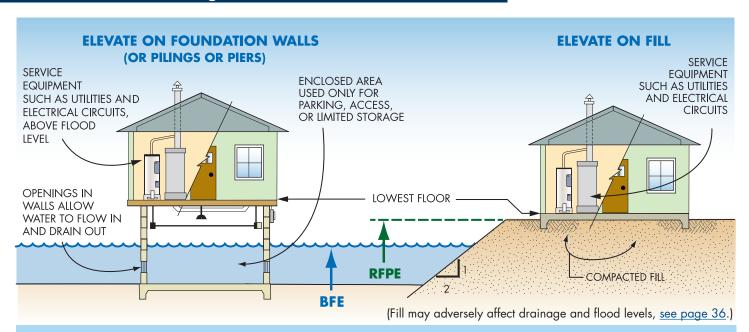


**Caution!** Enclosures (including crawlspaces) have some specific requirements (see page 54) and require a CUP. Note: When the walking surface of the lowest floor is at the RFPE, under-floor utilities are not allowed. Fill used to elevate buildings must be sized and placed properly (see page 52).

#### Placement and Compaction of Fill in Zone A/AE

Earthen fill used to raise the ground above the flood elevation must be placed properly so that it does not erode or slump when water rises. For safety and to meet requirements, fill should:

- Not be placed in areas with poor drainage or where the fill may divert water onto adjacent properties. Instead, use perimeter walls, piers, columns, or pilings to minimize drainage problems
- Be good clean soil, free of large rocks, construction debris, and woody material (stumps, roots)
- Be machine-compacted to 95 percent of the maximum density (determined by a design professional)
- Have graded side slopes that are not steeper than 2:1 (one foot vertical rise for every 2 feet horizontal extent); 3:1 flatter slopes are recommended
- Have slopes protected against erosion (vegetation for "low" velocities, durable materials for "high" velocities – determined by a design professional)

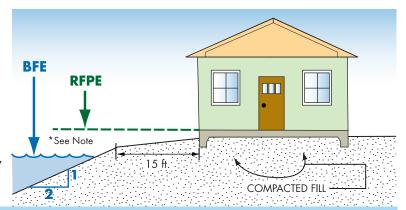

\*NOTE: State requirements specify that fill used to elevate residential buildings must extend at least 15 feet from the building to the point where the slope drops below the RFPE minus one foot.

#### **Basements in Flood Zones Are Unsafe LIVING AREA LIVING AREA RFPE** FIII I FVFI GROUND **BASEMENT WINDOW SUBGRADE** SUBGRADE BFE **BASEMENT BASEMENT** LOWEST. WATER PRESSURE AGAINST BASEMENT FLOOR Terms and **Definitions** SATURATED SOIL


A **basement** is any portion of a building that has its floor subgrade (below ground level) on all sides.

New buildings are not allowed to have basement floors below the RFPE and NFIP flood insurance coverage is very limited in existing basements for a very good reason. It only takes an inch of water over a door threshold or window sill and the entire basement fills up! Excavating a basement into fill doesn't always make it safe because saturated groundwater can damage the walls.

#### **Enclosures Below the Lowest Floor (Zone A/AE)**

#### **CRAWLSPACE\* FOUNDATION**


- Lowest Floor: At or above the RFPE (BFE + 1 to 1.5 ft.).
- **Plood openings:** At least two flood openings, on different sides of enclosure.
- **Flood openings:** Bottom of each opening no more than 12 inches above adjacent grade or interior floor.
- Interior ground or floor: At or above outside grade along at least one side.
- Materials: All materials below the lowest floor must be flood damageresistant.

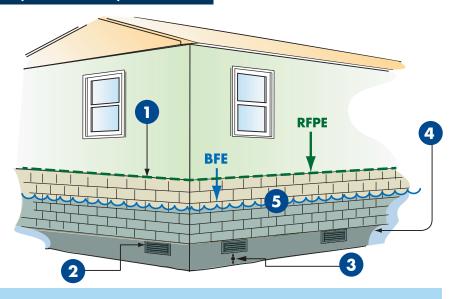


The following are required: Flood openings, elevated utilities, flood damage-resistant materials, and limitations on use. See NFIP Technical Bulletin #1 Requirements for Flood Openings in Foundation Walls and Walls of Enclosures and Technical Bulletin #2 Flood Damage-Resistant Materials Requirements.

\*For residential buildings, CUPs are required for solid perimeter wall foundations that enclose flood-prone space.


## Crawlspace\* Details (Zone A/AE)

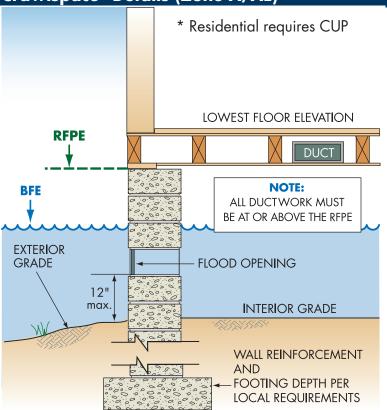

- Non-engineered flood openings must provide 1 sq. in. of net open area for every sq. ft. of area enclosed by the perimeter walls, measured on the outside.
- A 30' x 40' building needs 1,200 sq. in. of non-engineered net opening.
- Typical air ventilation unit, with screen, provides 42 to 65 sq. inches of net open area (some units may have "net free area" stamped on unit or on box). The area blocked by face plate or grill is not counted in net open area.
- Typical air ventilation units must be permanently disabled in the "open" position to allow water to flow in and out.
- Alternative: Engineering openings may be used if certified to allow adequate automatic inflow and outflow of floodwater.

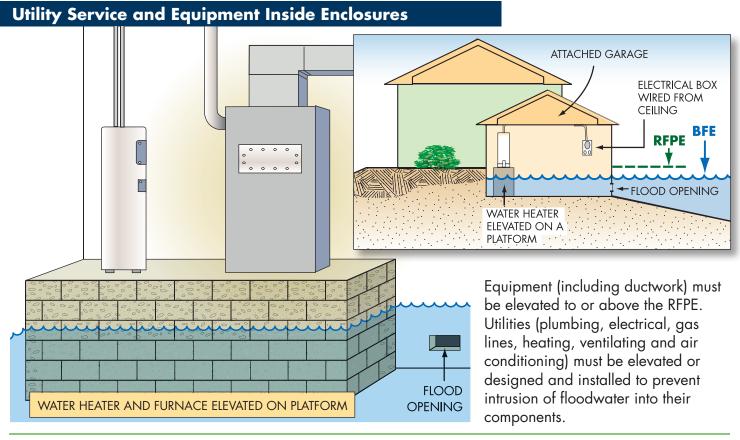

## **Utility Service, Equipment, and Tanks (Outside)**

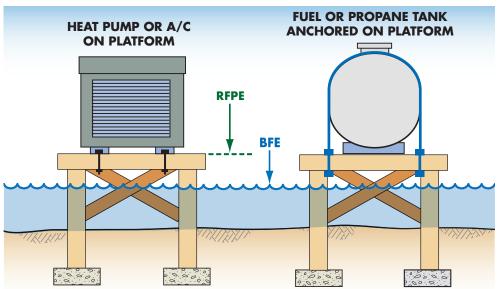





Fuel and propane tanks may explode or release contents during flooding. Even shallow water can create large buoyant forces on tanks. Tanks may be underground, elevated on platforms or columns, or at-grade and anchored to resist flood loads.

Fuel and propane tanks can pose serious threats to people, property and the environment during flood conditions. Search online for FEMA videos on "Securing Home Fuel Tanks" and "Anchoring Home Fuel Tanks."

# **Manufactured Homes Require Special Attention**

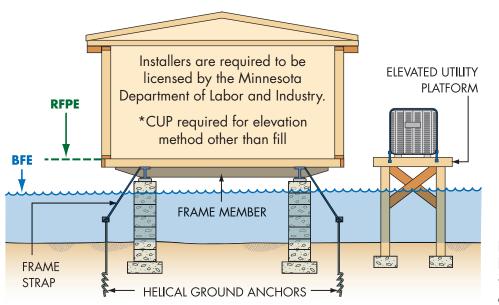

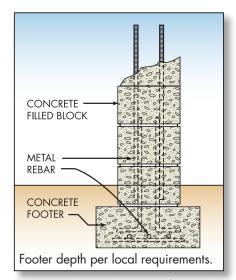


Experience shows that manufactured homes are easily damaged. Just a few inches of water above the floor can cause substantial damage.

Homes must be anchored to reinforced foundations to resist flotation, collapse, and lateral movement and must be tied down in accordance with community ordinances or the manufacturers' installation specifications for SFHAs. See guidance and some pre-engineered designs in FEMA P-85, Protecting Manufactured Homes from Floods and Other Hazards.

## General Requirements in Lake Superior Coastal High Hazard Areas (Zone V)

FEMA revisions to Flood Insurance Rate Maps for some Lake Superior shorelines may show coastal high hazard areas (Zone V). The fundamental requirements for flood resistant construction (see page 50) apply in Zone V. In addition:

- Buildings must be elevated on "open" foundations (pilings or columns) to allow waves and water to pass under without imposing significant wave forces.
- The lowest horizontal structural member of the lowest floor must be elevated to or above the RFPE.
- Foundation designs must be prepared and certified by registered design professionals.
- Enclosures below elevated buildings must be used only for parking, limited storage, and building access.
- Walls of enclosures must be flood damage-resistant materials and designed to break away under flood loads.

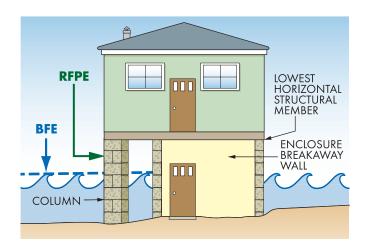

# Terms and Definitions

#### Coastal High Hazard Areas (Zone V)

are shown on FIRMS to identify areas subject to high velocity wave action during base flood conditions. In Zone V, waves may be 3 ft. or higher.

## **OTHER STRUCTURES AND DEVELOPMENT**

- **60** ..... Accessory Structures
- **61** ..... Agricultural Structures
- **62** ..... Recreational Vehicles
- 63 ..... Pools in Flood Hazard Areas
- **64** ..... Solar Power Facilities and Solar Panels in Flood Hazard Areas

# **Accessory Structures**

If not elevated, accessory structures in flood zones must:

- Not be in the floodway
- Be less than 576 sq. ft. in floor area
- Not be habitable
- Be used only for parking or storage (not pollutants or hazardous materials)
- Be anchored to resist floating
- Have flood openings
- Be built of flood damage-resistant materials
- Have elevated utilities
- Not be modified for different use in the future

Examples of accessory structures are detached garages, carports, storage sheds, pole barns, and hay sheds.

FLOOD OPENINGS

**ELEVATED UTILITIES** 

Even small buildings are "development" and permits or variances with noted conditions are required. They must be elevated or anchored and built to resist flood damage. **Caution!** Remember, everything inside will get wet when flooding occurs.

#### **Agricultural Structures**

Communities may adopt regulations to grant variances to allow certain agricultural structures to be "wet floodproofed" rather than elevated or dry floodproofed. FEMA specifies:

- Variances must be granted for individual agricultural structures
- Applicants must justify variances, including low damage potential and the anticipated hardship if variances are not granted
- Except for size limits, the accessory the accessory structure requirements also apply to agricultural structures (see page 60)

As an alternative to handling individual agricultural structures by variance, communities may seek a "community-wide exception" from FEMA. If approved, the exception allows communities to issue permits under specified conditions.

FEMA issued a policy on agricultural structures and accessory structures in early 2020. The policy, *Floodplain Management Bulletin*, FEMA P-2140, and fact sheets are available on FEMA's web site.

Contact <u>floodplain.dnr@state.mn.us</u> with questions.



Agricultural Structure is defined by FEMA policy as a structure that is used exclusively in connection with the production, harvesting, storage, raising, or drying of agricultural commodities and livestock. Aquaculture is farming conducted in or over water. Structures used for human habitation are not agricultural structures, even when located on agricultural land.

#### **Recreational Vehicles**

#### In flood zones, RVs must:

- Be licensed and titled as an RV (not as a permanent residence)
- Be built on a single chassis
- Must measure 400 sq. ft. or less (measured at largest horizontal projection)
- Have inflated tires and be self-propelled or towable by a light-duty truck
- Have no attached deck, porch, shed, or utilities
- Be used for temporary recreational, camping, travel or seasonal use (no more than 180 consecutive days)
- Have quick-disconnect sewage, water and electrical connectors





#### Camping near the water?

Ask the campground or RV park operator about flood warnings and plans for safe evacuations.

RVs that do not meet these conditions must be installed and elevated like manufactured homes, including permanent foundations and tie-downs (see page 58).

#### **Pools in Flood Hazard Areas**

Pools in flood hazard areas should be designed and constructed to be stable during flooding. Empty pools may be dislodged if the surrounding soil becomes saturated. Where a pool is located and whether it is inground, above-ground, or a combination (perhaps with associated grading and fill) determine requirements:

- Floodway: Pools may be allowed in floodways with Conditional Use Permit (CUP), provided the no-rise requirements are satisfied (see page 41). When a floodway is not delineated, an analysis is required (see page 42).
- Flood Fringe: Pools may be permitted in flood fringe areas without encroachment analyses.
- **Shoreland Districts:** Pools must satisfy shoreland management setbacks.

#### In addition:

- **Pool fencing** should be made of flood damage-resistant materials
- **Pool houses** used to store hazardous chemicals and/or those with floor area larger than 576 sq. ft. must be elevated at or above the RFPE.
- Pool controls and equipment must meet the requirements for utility service (see page 57).

#### Solar Power Facilities and Solar Panels in Flood Hazard Areas

**Solar power facilities** that generate power for off-site consumption (sometimes called solar farms or solar arrays), and **ground-mounted solar panels** that serve individual buildings, are allowed in SFHAs and Shoreland Districts provided:

- **Shoreland District:** The structures satisfy shoreland management setbacks.
- **Floodway:** The structures are not located in floodways (<u>see page 17</u>). When a floodway is not delineated, an analysis is required (<u>see page 42</u>).
- **Flood Fringe:** The structures are allowed in flood fringe areas if they are:
  - Designed to have solar panels, when fully tilted, above the RFPE
  - Anchored to prevent flotation, collapse, or lateral movement during base flood conditions
  - Constructed with flood damage-resistant materials below the RFPE

**Roof-mounted solar panels** are allowed on buildings in SFHAs provided the roofs and connections to electric service are above the RFPE.

For additional guidance, download MNDNR's
Considerations for Siting Solar Power Facilities Near Lakes and Rivers

# **EXISTING BUILDINGS**

65 Improvements and Repairs of Buildings in Flood Zones	
66 What is Meant by Pre-FIRM and Post-FIRM?	
67 Substantial Improvement/Substantial Damage Desk Reference	
68 Answers to Questions about Substantial Improvement and Substantial Dam	age
69 Estimating Costs of Improvements and Repairs	
70 Estimating Substantial Damage	
71 Non-Substantial Improvements	
72 Non-Substantial Improvement: Lateral Addition	
73 Substantial Improvement: Additions	
74 Substantial Improvement: Renovation Only	The state of the s
75 Elevating an Existing Building	The state of the s
76 Repair of Damaged Buildings	
77 Paying for Post-Flood Compliance	The state of the s

# Improvements and Repairs of Buildings in Flood Zones

Permits to improve and repair buildings are required. Local officials must:

- Review costs estimated in construction contracts or other cost estimates (including estimated market value of owner labor and donated labor and materials).
- Many communities use costs of maintenance and repairs within the past 365 days, plus proposed the costs of proposed improvements. Some accumulate improvement costs since they adopted floodplain management regulations.
- Estimate the market value using property assessment records or use an Actual Cash Value or independent assessment of market value performed by a licensed appraiser.
- Compare the costs of improvements and costs of repairs to the building market value.
- Require buildings to be brought into full compliance if the costs equal or exceed 50% of the market value, called Substantial Improvement (or repair of Substantial Damage).
- Encourage owners to consider other ways to reduce future damage if the comparison is less than 50% (see page 78).




- Lateral addition only that is not substantial improvement (see page 72)
- Lateral additions (see page 73)
- Renovation/ rehabilitation of the interior of the existing building (see page 74)
- Non-substantial improvements (see page 71)

By Minnesota statute, destroyed nonconforming structures may be reconstructed if permit applications are submitted within 180 days of the destruction. However, destroyed nonconforming structures in SFHAs must be brought into compliance with the requirements for new construction in SFHAs.

### What is Meant by Pre-FIRM and Post-FIRM?

**Pre-FIRM** and **Post-FIRM** are NFIP insurance terms tied to the date of a community's initial Flood Insurance Prior to October 2021, the NFIP used the terms to determine flood insurance rates. Although common, the terms should not be used to distinguish between structures built before a community joined the NFIP and those built after, especially in communities where the FIRMs have been revised.


Existing buildings and legal non-conforming buildings in SFHAs must be brought into compliance when work is determined to be substantial improvement or repair of substantial damage.

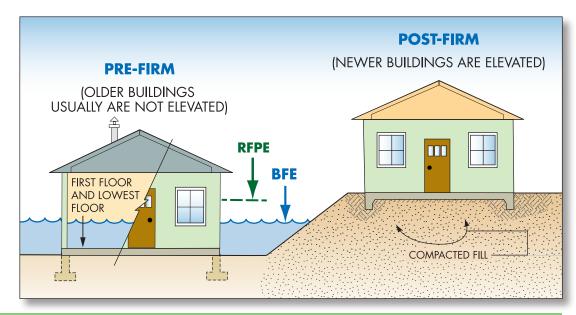

#### **Substantial Improvement/Substantial Damage Desk Reference**

FEMA's SI/SD Desk Reference (FEMA P-758) provides guidance and suggested procedures for:

- Estimating costs of improvements and costs of repairs (see page 70)
- Estimating market values
- Community and property owner responsibilities
- Administrative requirements
- Key aspects of bringing buildings into compliance
- Suggestions for preparing for disasters

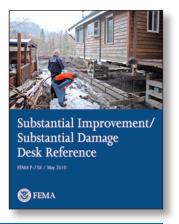

Terms and Definitions

Substantial Improvement means any reconstruction, rehabilitation, addition, or other improvement of a structure, the cost of which equals or exceeds 50% of the market value of the structure before the "start of construction" of the improvement. The term includes structures that have incurred "substantial damage" from any cause, regardless of the actual repair work performed. The term does not include improvements of structures to correct existing violations of state or local health, sanitary, or safety code requirements. Some Minnesota communities have a threshold lower than 50% and most communities track improvements over a period of time, triggering compliance for repetitive flood damage, when the cumulative improvement value equals or exceeds 50%, or when a structure has been previously altered.

#### Answers to Questions about Substantial Improvement and Substantial Damage

FEMA's Answers to Questions about Substantially Improved/Substantially Damaged Buildings (FEMA 213) is a good resources for citizens, elected officials, members of appointed boards, contractors, and real estate and insurance professionals. Each question refers the reader to sections in the SI/SD Desk Reference (FEMA P-758) for more details.

#### FEMA 213 uses the FAQ format to:

- Explain the NFIP definitions and regulations for SI/SD
- Answer general questions about the SI/SD requirements
- Explain how local officials make SI/SD determinations
- Explain how to estimate costs and market values
- Answer common questions that arise in the post-disaster period



Terms and Definitions

**Substantial damage** means damage of any origin sustained by a structure whereby the cost of restoring the structure to its before damage condition would equal or exceed

50 percent of the market value of the structure before damage occurred.

# **Estimating Costs of Improvements and Repairs**

The costs of improvements (or the costs to repair damaged buildings to pre-damage condition) must be estimated before determining whether proposed work constitutes Substantial Improvement or repair of Substantial Damage.

- **Include** costs of all structural elements, all interior and exterior finishes, built-in appliances, all utility and service equipment
- **Include** site preparation related to the improvement or repair (e.g., foundation excavation or filling in basements)
- Include costs of demolition, construction management, contractor overhead and profit
- **Include** costs associated with elevating a structure when the proposed elevation is lower than the BFE + 1 foot
- **Exclude** costs of plans and specifications, land survey, permit and inspection fees, and debris removal
- **Exclude** costs of outside improvements (landscaping, irrigation, sidewalks, driveways, fences, yard lights, pools, detached accessory structures, etc.)




Written estimates prepared by contractors provide the best cost information.

Owners performing work must include estimates of the value of their own labor.

Equivalent costs must be estimated when materials are donated or volunteers help with construction.

For more details on cost items that must be included and those that are excluded, see the SI/SD Desk Reference (see page 67).

#### **Estimating Substantial Damage**

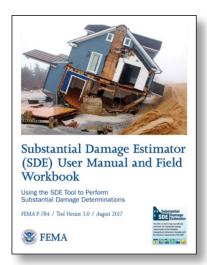

FEMA P-784, the Substantial Damage Estimator (SDE) tool, was developed to help state and local officials to collect uniform information needed to make substantial damage estimates when residential and non-residential structures are damaged.

#### The SDE tool:

- Can be used to assess flood, wind, wildfire, seismic, and other forms of damage
- Helps provide timely substantial damage determinations so that reconstruction can begin following events that damage buildings
- Is used in conjunction with industry-accepted construction cost-estimating guides

Visit <a href="https://www.dnr.state.mn.us/climate/floods/index.html">https://www.dnr.state.mn.us/climate/floods/index.html</a> for information on Flood Preparation, Response, and Recovery, including videos for local officials, links to other programs, current flood forecasts and stream flow conditions, and resources for communities, homeowners and renters.


#### **Non-Substantial Improvements**

Proposed improvements are "non-substantial" if the costs are less than 50% of the market value of the building. In these cases, buildings are not required to be brought into compliance. However, there are many things owners can do to reduce exposure to future flooding. Owners should consider the following:

 Use flood damage-resistant materials, for example tile, closed-cell wall insulation, and polyvinyl wall coverings

 Raise air conditioning equipment, heat pumps, furnaces, water heaters, and other appliances on platforms


- Move electric outlets higher above the floor
- Add flood openings to crawlspace foundations
- Move ductwork out of crawlspaces
- Fill in below-grade crawlspace

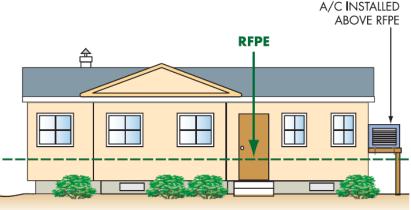

**Note!** ALL proposed work must be included in permit applications. If more work is proposed or undertaken after a permit is issued, community officials must determine whether the additional work changes the substantial improvement determination.

HEAT PUMP OR

#### **Non-Substantial Improvement: Lateral Addition**

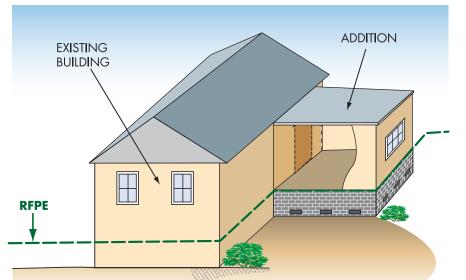




Permits are required to build additions to buildings in SFHAs and Shoreland Districts. In SFHAs, communities must determine whether proposed work will trigger the substantial improvement requirement.

<u>See page 73</u> for projects to add lateral additions that are substantial improvements.

If an addition is not substantial improvement (cost less than 50% of market value), only the addition must be elevated and comply with requirements. Some communities accumulate costs of maintenance, repairs, and improvement over the past 365 days, and some accumulate costs since they adopted floodplain management regulations.

# **Substantial Improvement: Additions**

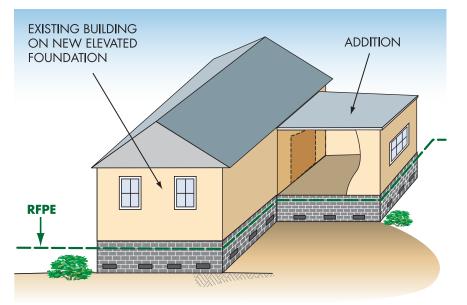




In SFHAs, when communities determine an addition is substantial improvement, or an addition plus other improvements to an existing building are substantial improvements, the addition and the existing building must be elevated in compliance with the requirements for SFHAs.

Community permit offices can help determine which requirements apply when buildings must be brought into compliance. A preliminary review of proposed improvements is recommended before projects are designed and before permit applications are submitted.

#### **Substantial Improvement: Renovation Only**

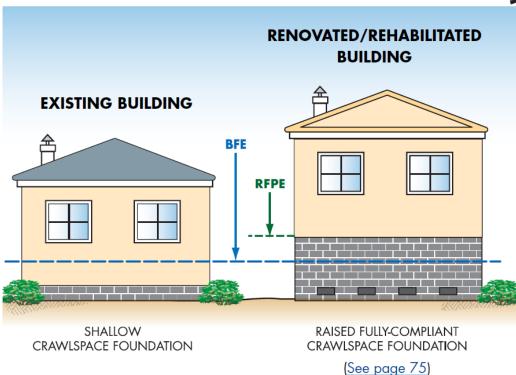



#### Information


Buildings in SFHAs can be improved, renovated, rehabilitated or altered, but special rules apply.

Consult local permit offices before beginning work. Provide complete information about all proposed work.

If local code officials have cited violations of State or local health, sanitary, or safety codes, minimum costs to correct violations to provide safe living conditions can be excluded from the cost of renovations.


Alteration of registered historic structures are allowed, by variance, as long as the structures continue to meet the criteria for listing as historic structures.

### **Elevating an Existing Building**

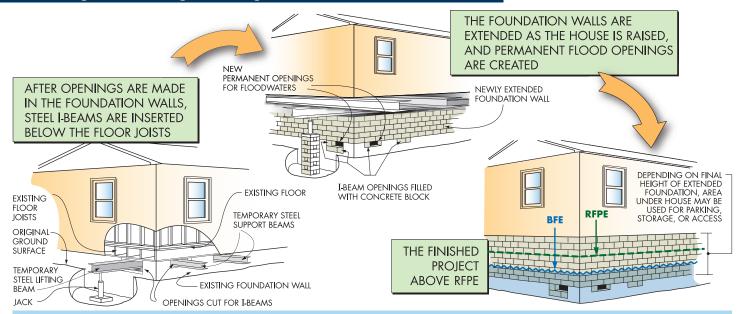

This is one way to elevate an existing building to comply with building code and floodplain regulations (also see FEMA P-312, Homeowner's Guide to Retrofitting). If an NFIP-insured building is damaged by flood and the community determines it is substantially damaged, the owner may be eligible for an **Increased Cost of Compliance** payment (see page 77).

### **Repair of Damaged Buildings**

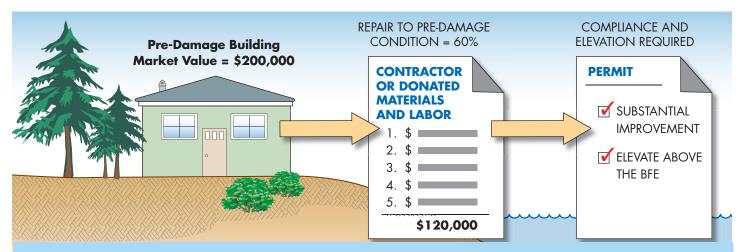

Permits are required to repair damaged buildings, regardless of the cause – fire, flood, wind, or even vehicle impact. Detailed estimates of the cost to repair a building to pre-damage condition are required. If the costs are 50% or more of the pre-damage market value of the building, then it is "substantially damaged" and must be brought into compliance, which may involve raising the foundation and other measures. Consult with local permit offices before repairs are started.

Even if applications are submitted within 180 days, destroyed nonconforming structures in SFHAs must be brought into compliance with the requirements for new construction in SFHAs.

# **Paying for Post-Flood Compliance**

Owners may be eligible for up to \$30,000 to help pay to bring buildings into compliance with building code and community requirements – if all of the following apply:

- Buildings are located in a mapped flood zone
- Buildings are covered by NFIP flood insurance, which includes Increased Cost of Compliance coverage
- Buildings have lowest floors below the BFE
- The community made an official determination that buildings were substantially damaged **by flooding**
- Substantial damage may be one-time 50% or by repetitive flood damage in communities that enforce repetitive loss provisions
- Owners act quickly with their claims adjusters and community officials to process all required paperwork

Learn more at <a href="https://www.fema.gov/increased-cost-compliance-coverage.">www.fema.gov/increased-cost-compliance-coverage.</a>

Owners whose buildings are substantially damaged are required to "bring the buildings into compliance" with flood zone requirements.

#### **USE THE ICC CLAIM TO:**



ELEVATE-IN-PLACE



RELOCATE TO HIGH GROUND




**DEMOLISH** 



FLOODPROOF (NON-RESIDENTIAL ONLY)

#### FLOOD PROTECTION AND MITIGATION

- **78** ..... Some Flood Protection for Older Homes is Easy and Low Cost
- **79** ..... Small Berms or Floodwalls May Protect Older Buildings
- **80** ..... Some Flood Mitigation Projects are More Costly Up Front

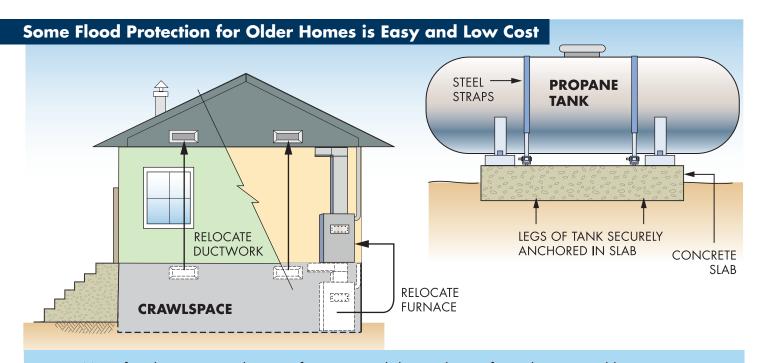


Move fuse boxes, water heaters, furnaces, and ductwork out of crawlspaces and basements.

Anchor heating oil and propane gas tanks to prevent flotation and lateral movement.

Do not store valuables or hazardous materials in a flood-prone crawlspace or basement.

Use flood-resistant materials when repairs are made.

# Small Berms or Floodwalls May Protect Older Buildings

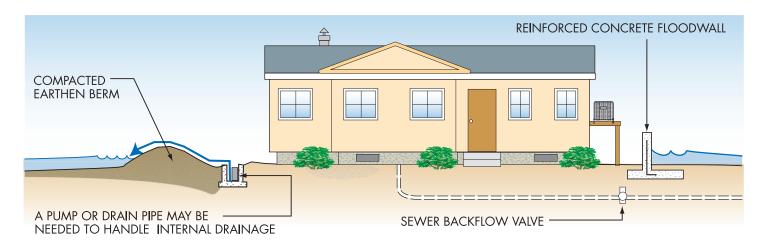

In areas where floodwater isn't expected to be deep, sometimes individual buildings can be protected by earthen berms or concrete floodwalls. Permits are required for these protection measures and extra care must be taken if sites are in floodways (see page 17). Small berms or floodwalls cannot be used to achieve compliance for new construction, substantially improved buildings, or substantially damaged buildings.

**Important!** These protective measures will not reduce your NFIP flood insurance premium!

#### Some Flood Mitigation Projects are More Costly Up Front

#### But Give More Protection and a Positive Return on Investment

Following floods, some communities purchase and remove damaged homes. The acquired land is dedicated to public open space or stormwater storage and can be used for recreation or to help restore wildlife habitat and wetlands.

Some homes have been elevated on new, higher foundations, and others have been moved to safer high ground outside of high risk flood hazard areas. Studies indicate these types of projects have a 7:1 return on investment.



The Minnesota Division of Homeland Security and Emergency Management (HSEM) administers FEMA mitigation grant programs: https://dps.mn.gov/divisions/HSEM.

The MNDNR administers the State Flood Hazard Mitigation grant program: <a href="https://www.dnr.state.mn.us/waters/watermgmt\_section/flood\_damage/index.html">https://www.dnr.state.mn.us/waters/watermgmt\_section/flood\_damage/index.html</a>.

# **SAFETY AND PREPAREDNESS**

**81** ..... StormAware: Turn Around Don't Drown®

**82** ..... Be Prepared for Flood Emergencies

#### StormAware: Turn Around Don't Drown®

Learn about flood risks and follow these safety rules:

- When flooding is expected, stay away from creeks, streams, and rivers.
- NEVER drive through flooded roads they may be washed out.
- Passenger cars may float in only 12-24 inches of water.
- Be especially cautious at night when it is harder to recognize dangers.
- Just 6 inches of fast-moving water can knock you off your feet.
- https://www.weather.gov/safety/flood-turn-around-dont-drown.





### **Be Prepared for Flood Emergencies**

Everyone should be prepared for floods and other emergencies. Preparation begins at home, at work places, at schools, and in communities.

Sometimes floods and other disasters can strike quickly and without warning and evacuation may be required. Basic services (water, gas, electricity and telephones) may be interrupted, perhaps for several days. Local officials and emergency relief workers will be on the scene after disasters, but they cannot reach everyone right away. Communities, families, and businesses should prepare before disasters occur by:

- Learning about natural hazards (Minnesota communities participate in developing Hazard Mitigation Plans)
- Learning about community level flood preparation and the Community Resources Toolbox developed by the St. Paul District U.S. Army Corps of Engineers, including *Emergency Action Plan Guidance and Flood Fight Handbook*.
- Making family and workplace emergency plans and knowing where to go if evacuations are required
- Putting together disaster kits with supplies to last a few days

Learn more online at www.ready.gov, the American Red Cross (<a href="www.redcross.org">www.redcross.org</a>), and the Minnesota HSEM (<a href="https://dps.mn.gov/divisions/hsem">https://dps.mn.gov/divisions/hsem</a>).

Also check with local emergency management agencies.







# **RESOURCES**



MINNESOTA QUICK GUIDE

#### **Useful Resources and Common Acronyms**

- MNDNR Floodplain Management, information for community officials and homeowners and related links: <a href="https://mndnr.gov/floodplain/">https://mndnr.gov/floodplain/</a> and <a href="https://www.dnr.state.mn.us/waters/watermgmt\_section/floodplain/access-flood-maps.html">https://www.dnr.state.mn.us/waters/watermgmt\_section/floodplain/access-flood-maps.html</a>
- MNDNR Shoreland Management: www.dnr.state.mn.us/waters/watermgmt\_section/shoreland/
- MNTOPO, 2-foot elevation contours and other topographic and floodplain data: <a href="https://www.dnr.state.mn.us/maps/mntopo/index.html">https://www.dnr.state.mn.us/maps/mntopo/index.html</a>
- NFIP regulations, Title 44 CFR: <a href="https://www.fema.gov/flood-insurance/rules-legislation/laws">https://www.fema.gov/flood-insurance/rules-legislation/laws</a>
- NFIP Technical Bulletins: <a href="https://www.fema.gov/emergency-managers/risk-management/building-science/national-flood-insurance-technical-bulletins">https://www.fema.gov/emergency-managers/risk-management/building-science/national-flood-insurance-technical-bulletins</a>
- Community Rating System resources: <a href="https://www.fema.gov/floodplain-management/community-rating-system">https://www.fema.gov/floodplain-management/community-rating-system</a>

#### **Common Acronyms**

- BFE = Base Flood Elevation
- CUP = Conditional Use Permit
- EC = Elevation Certificate
- FIRM = Flood Insurance Rate Map
- NFIP = National Flood Insurance Program
- RFPE = Regulatory Flood Protection Elevation
- SFHA = Special Flood Hazard Area (100-year floodplain)

#### Want to Learn More?

- For information and advice on permits, contact local building or planning departments.
- To learn about FEMA maps, go to <a href="https://www.fema.gov/flood-maps">www.fema.gov/flood-maps</a>.
- FEMA's on-line publications can be found in the FEMA Media Library (<a href="www.fema.gov/multimedia-library/">www.fema.gov/multimedia-library/</a>) or by using an Internet search engine to search on the publication number or title.
- To learn about NFIP flood insurance, call an insurance agent; most insurance companies write NFIP policies.
- To learn the importance of taking steps to financially protect homes and businesses from flood damage go to www.floodsmart.gov.
- To join the Minnesota Association of Floodplain Managers and see conference opportunities, go to <a href="https://www.mnafpm.org">www.mnafpm.org</a>.
- See upcoming trainings, subscribe to the Water Talk newsletter, and view past newsletters at <a href="https://mndnr.gov/floodplain">https://mndnr.gov/floodplain</a>
  (under Training and Education).



Water Talk Newsletter - Summer 2018

Download this **Quick Guide** and access other Minnesota floodplain management resources and notices of upcoming trainings and MNAFPM conferences from



Minnesota Department of Natural Resources, Floodplain Program

https://mndnr.gov/floodplain/



Minnesota Association of Floodplain Managers

www.mnafpm.org (see <Resources>)